


Footlights & Under-seat Lights

CIVIC

Installation overview

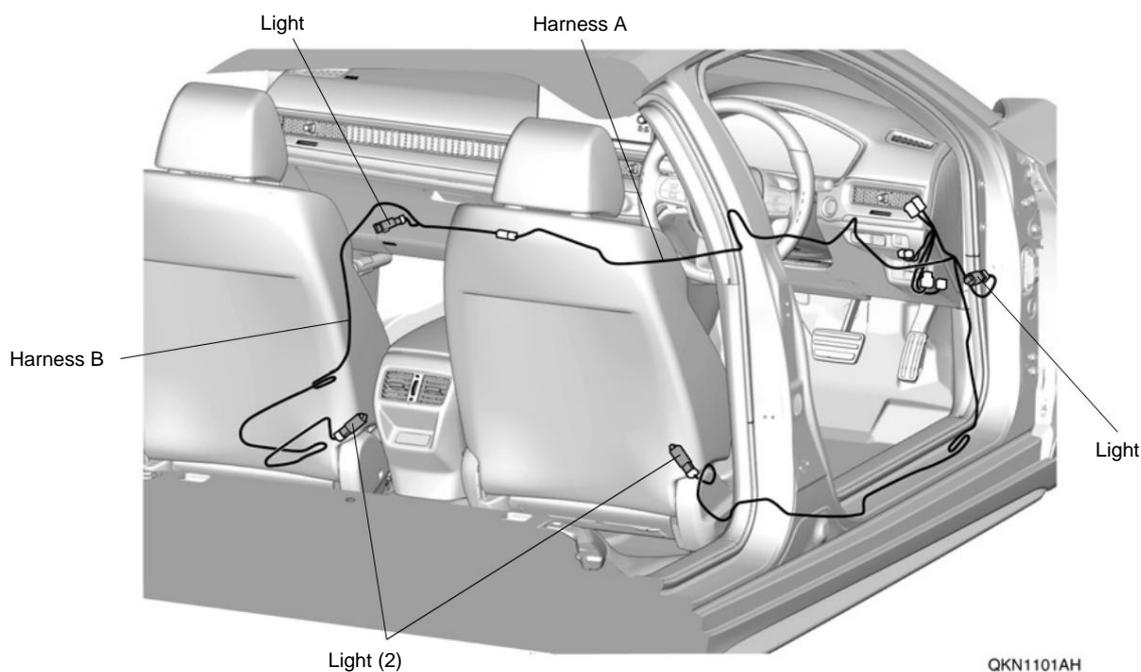

For safe installation (please read)

About caution marks

- In this manual, the following symbols are used to warn of the possibility of injury to the operator or other persons, and to provide advice on installation.

I will explain using:


危険

指示に従わないと、死亡または重大な傷害に至るもの


警告

指示に従わないと、死亡または重大な傷害に至る可能性があるもの


注意

指示に従わないと、傷害をうける可能性があるもの

アドバイス


故障、破損するのを防ぐためのアドバイスや、知っておくと便利なこと



禁止事項

About icons

- 作業する場所と作業者の目線を下記のアイコンを使って表示します。

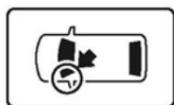

車両に対しての場所



インストルメントパネル付近に対しての場所

- 作業中に必ず守っていただくことを下記のアイコンを使って表示します。



保護めがねを着用する



革手袋を着用する



二人作業を行う



部品を段ボールまたは毛布の上に置く



バリを取り除く



タッチアップペイントを塗布し、十分に乾燥させる



部品を保管(お客様へ返却)する



貼り付け面を十分に圧着する



指定トルクで締め付ける




面に対して垂直に作業を行う



脱脂洗浄剤で清掃する


Precautions when handling wire harnesses

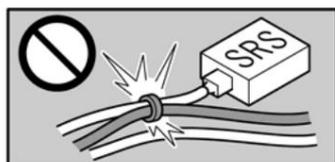

用品ハーネスとSRSハーネスを一緒にクランプしないこと。(指示がある場合を除く)




カブラ、端子の接続は、確実にロックするまで差し込むこと。

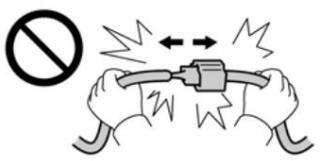

カブラ、端子類の接続を外す時は、ハーネスを引っ張らないこと。



ステー等から取り外したカブラは必ず元に戻すこと。

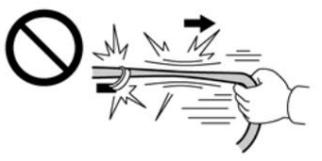


ハーネス類は強く引っ張らないこと。



用品ハーネスは、垂れ下がらないよう指定された場所にクランプすること。



ハーネス類は部品にかみ込ませないこと。

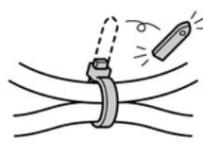

ハーネスバンドの余った部分は、カットすること。

General Notes

- In addition to the installation instructions, follow the maintenance information and related matters in the service manual.
Pay close attention to safety.
- Do not scratch or damage the vehicle body or any of its parts.
- Be especially careful with clips, claws, etc.
- Before removing vehicle parts, check their installation condition to take into account the need for restoration.
- Illustrations may vary slightly due to changes in vehicle design, etc.

Caution regarding electrical components

- Never perform any installation work with the negative (-) battery terminal connected.

Notes about this product

- **Be sure to use the bolts, screws, etc. specified in this instruction manual.**

Using parts may result in problems.


- Do not install or attach the product in places exposed to direct sunlight or where dust may be present.
- When applying the sticker, keep the temperature of the application surface between 15 and 40°C.
- The adhesiveness of tapes and films may decrease, especially at low temperatures.


Then paste it.

- Be careful not to damage the equipment or vehicle parts, and apply sufficient pressure when attaching the sticker.
- Be careful not to reapply the sticker. Reapplying the sticker may damage it or cause tape, film, etc. to get in the way.
performance may not be fully demonstrated.

Components

Foot Light & Seat Under Light Kit

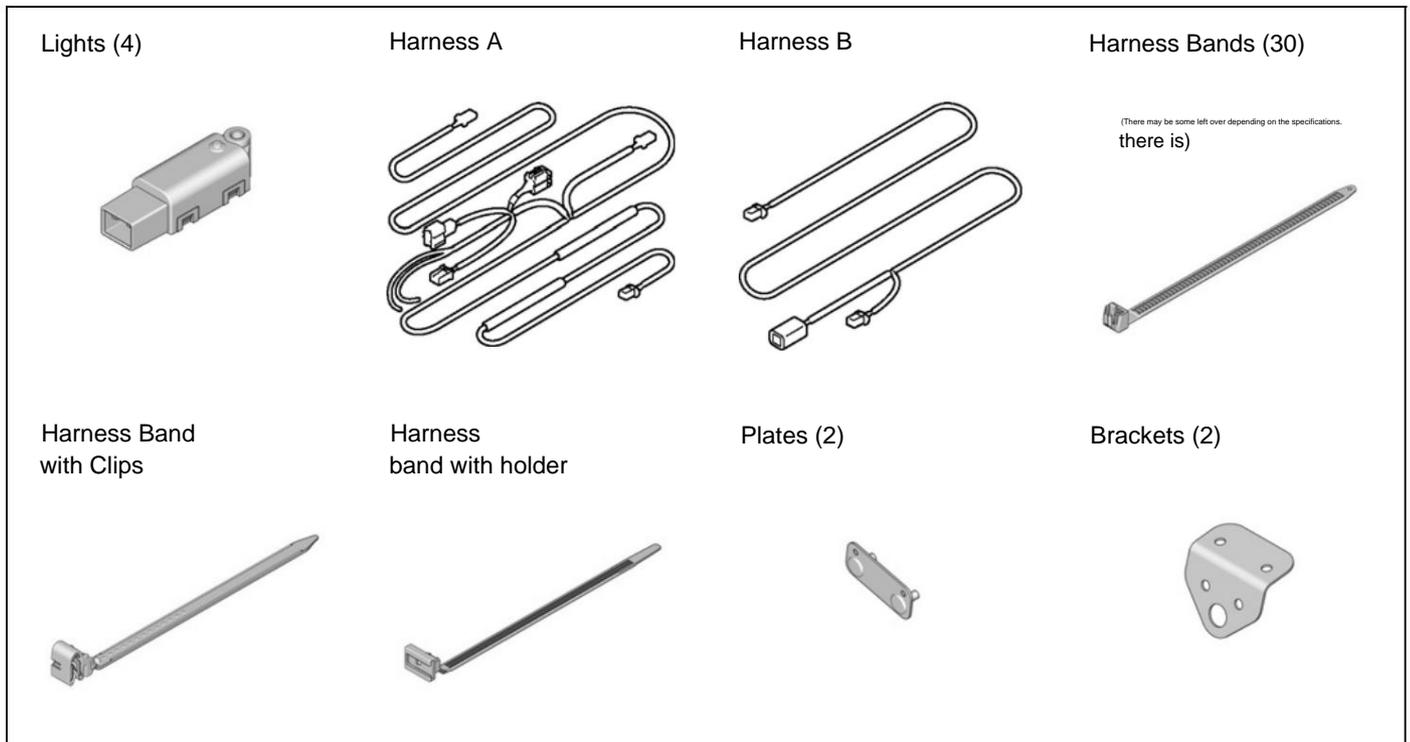

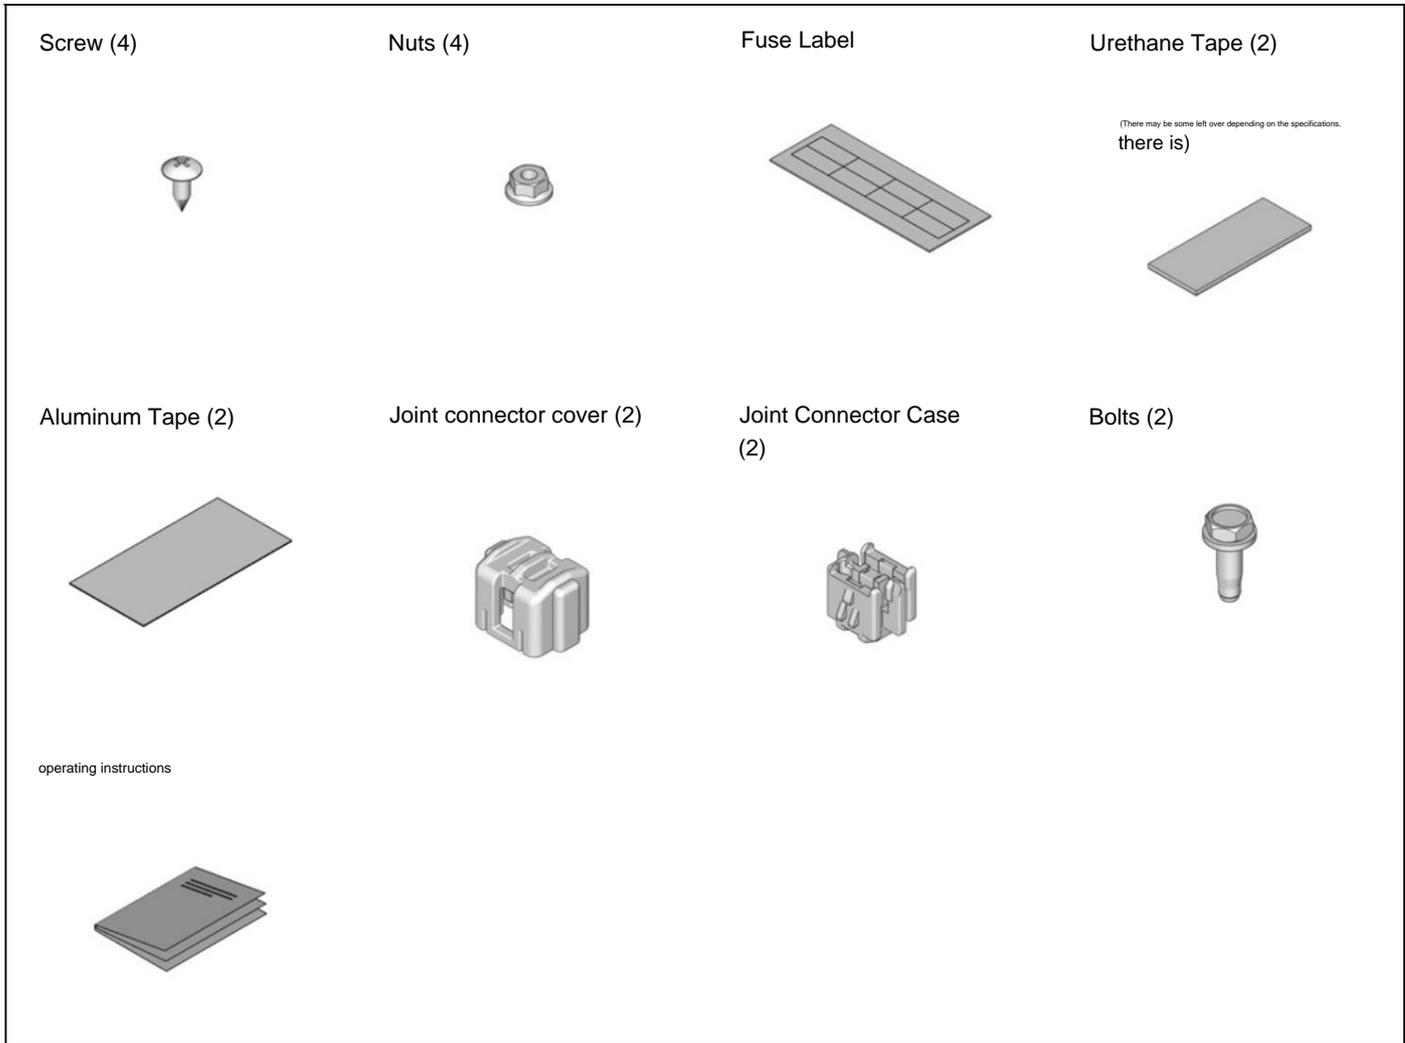

Necessary tools/equipment

- Phillips head screwdriver
- Spanner
- Pliers
- Scissors
- Degreaser (Honda genuine product)
- Rag
- Ratchet
- Socket
- Torque wrench
- Torx bit
- Drill
- Drill bit
- File
- Tacks
- Handy remover set

- Ruler
- Nippers
- Electrical tape
- wire
- Protective eyewear
- T-shaped Torx wrench
- Adhesive tape

(KTC ATP2014) equivalent


Installation methods and procedures

How to clean with a degreaser

- Soak a cloth in a degreasing cleaner and remove any oil from the application surface. 10 minutes, and wipe off any dirt, dust, etc.



アドバイス

- Always use genuine Honda degreasing cleaners. and.
- Do not apply the degreasing agent directly to the application surface. • Allow the surface to dry completely before applying the adhesive.


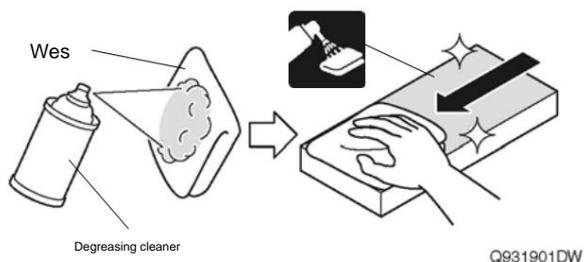


Preparation before installation


1. Remove the bolt.

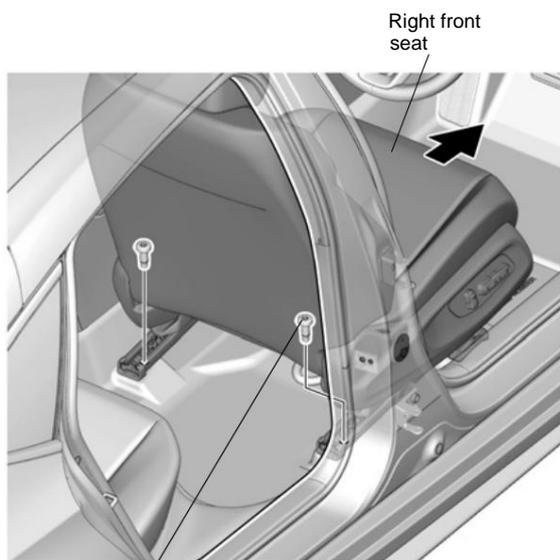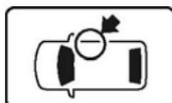

2. Remove the bolt.

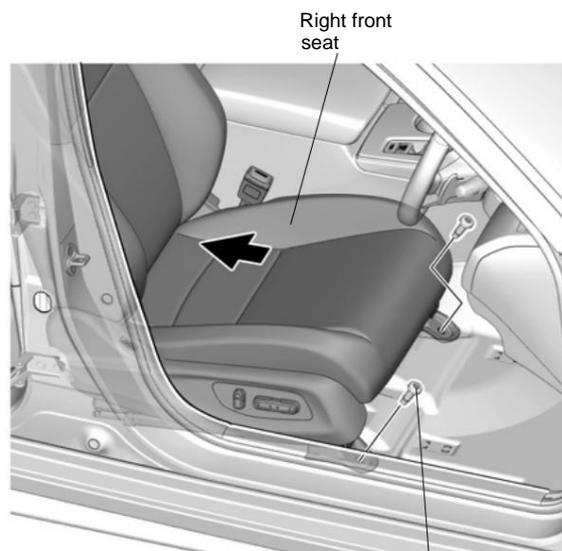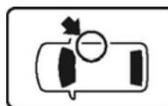


3. Repeat on the other side.

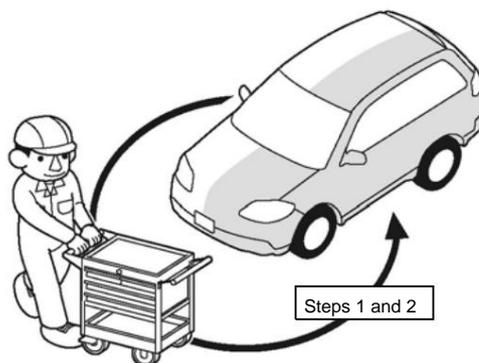

Disconnect the negative (-) battery terminal


- 4. Perform the steps before removing the battery.
- 5. Add audio, navigation, etc. as needed.
Record some settings.
- 6. Disconnect the negative (-) battery terminal.

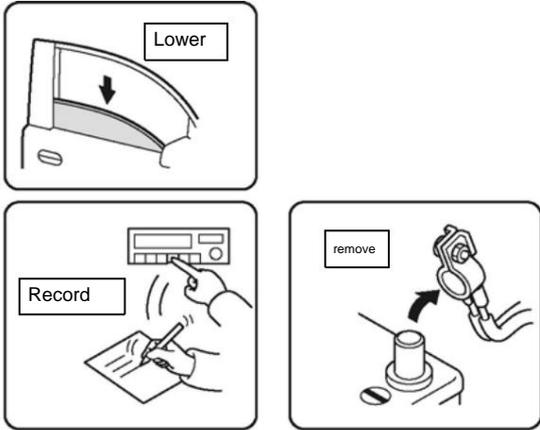

QCD0502BM


Removal of vehicle parts

- 7. Remove the assistant under cover.

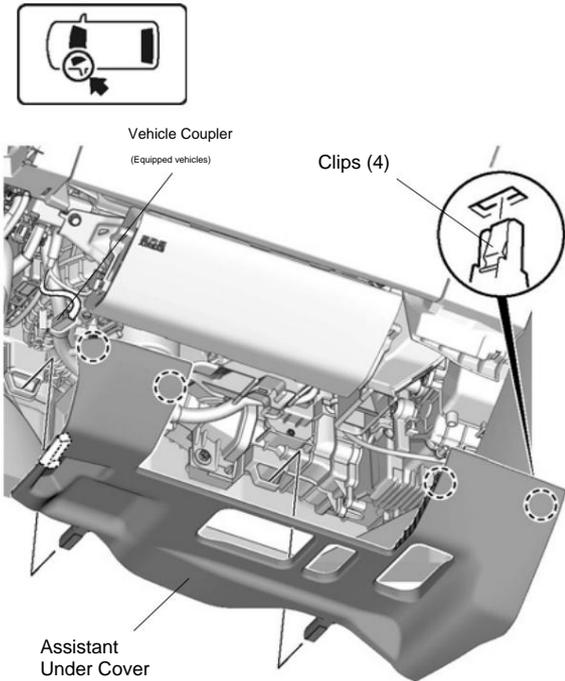


QK00123AT

- 8. Remove the left front side garnish.

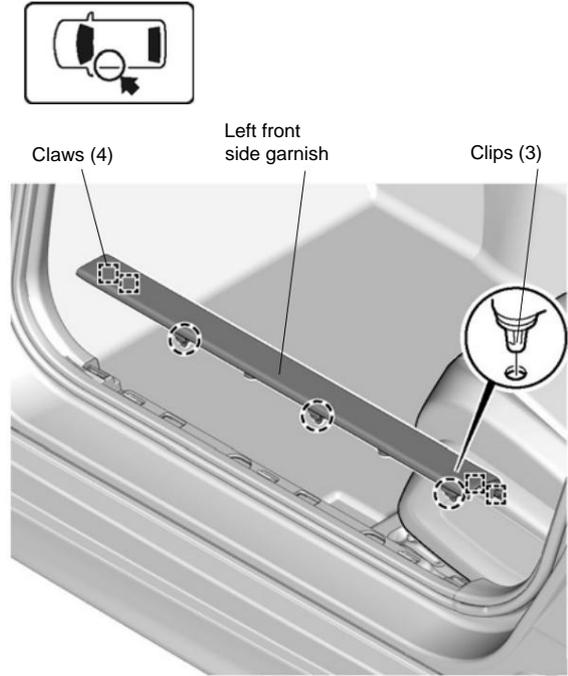


QK30601AT

- 9. Remove the left cowl side lining.

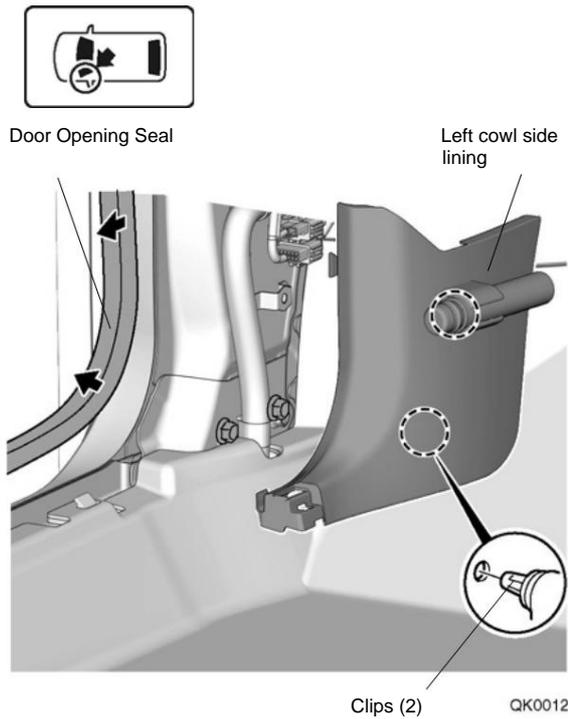

QK00122AT

10. Remove the driver lower cover.

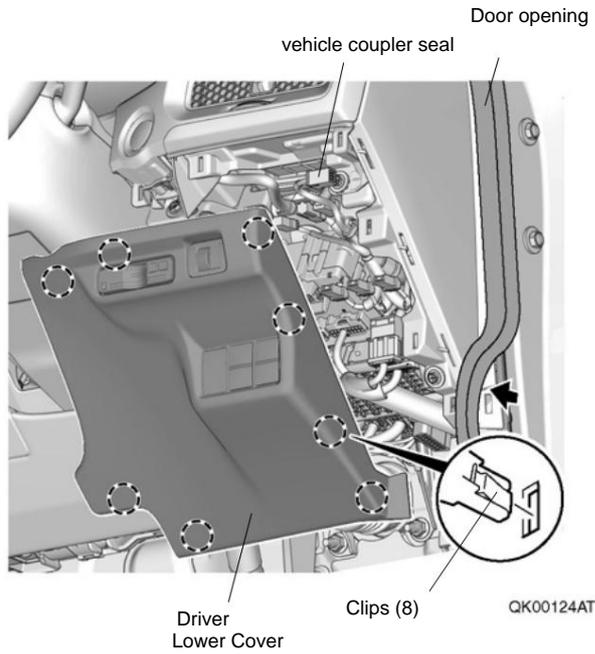


11. Fix the column tilt position at the highest position.

12. Apply adhesive tape to protect the vehicle.

アドバイス

- Do not remove the adhesive tape until the restoration is complete.
and.

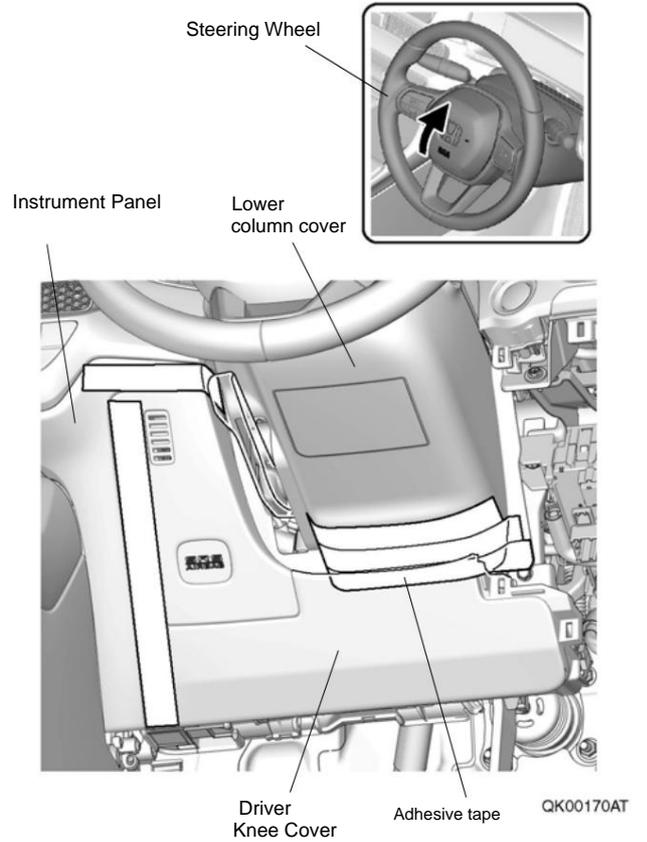


13. Remove the driver knee cover.

⚠ 注意

- Disconnect the negative (-) battery terminal and leave it for at least 3 minutes. Leave it alone before working on it.
- Do not drop or hit the removed airbag. Be careful not to do this.
- Always store with the padded surface facing up.


アドバイス

- Remove the clips in the dashed line area starting from the top.

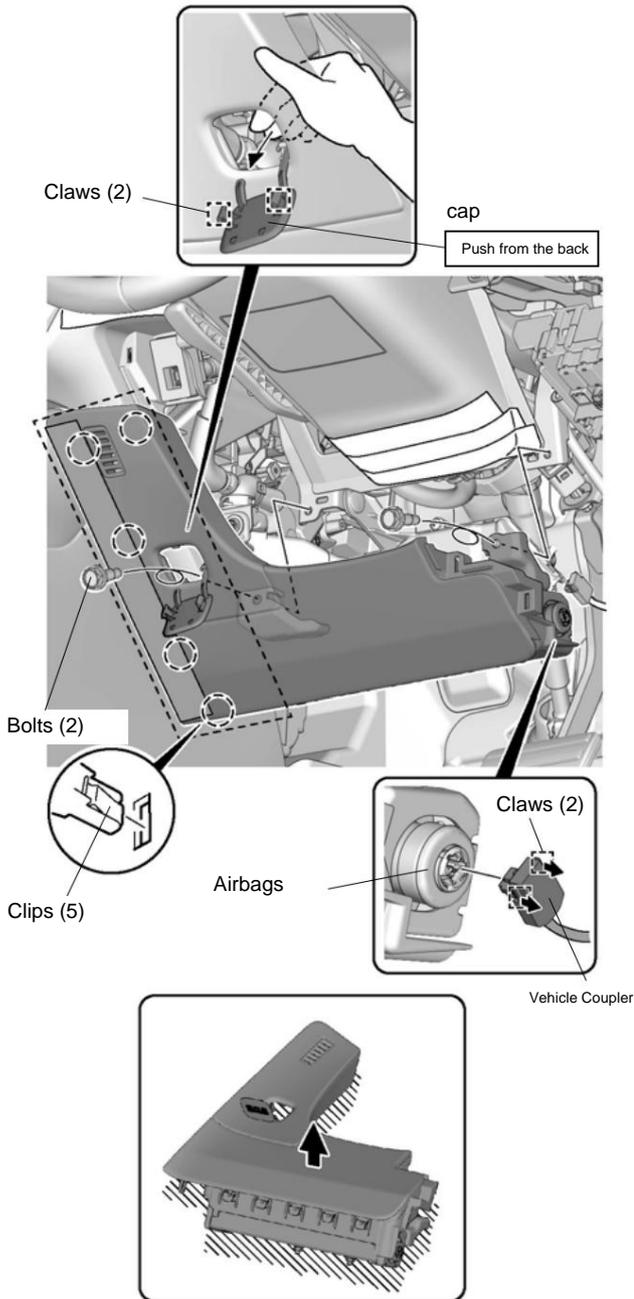


QK00125CT

14. Remove the right front side garnish.

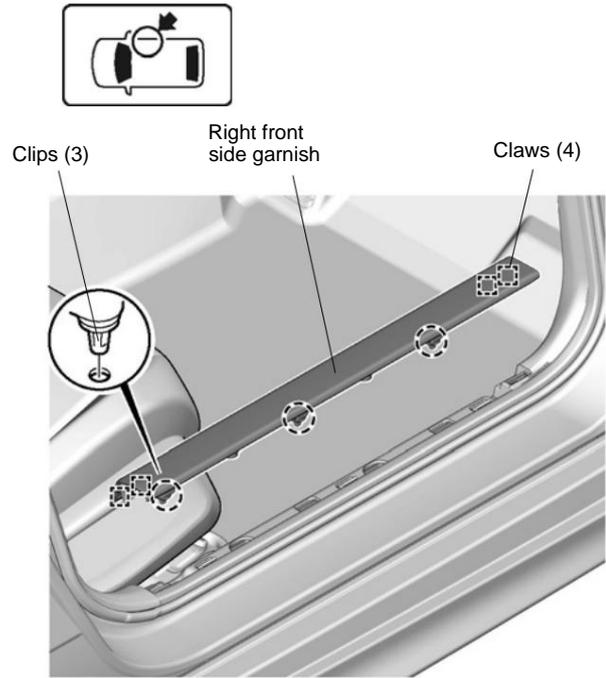

QK30602AT

15. Remove the right cowl side lining.

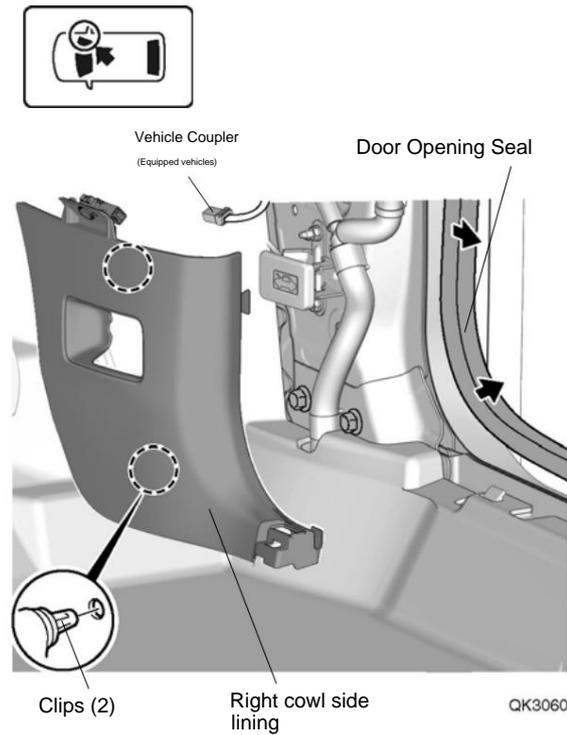


QK30604AT

Wiring harnesses A and B

16. Follow the instructions below.

•Vehicle foot lights		
	Equipped vehicles	Go to step 17
	Unequipped vehicles	Go to step 19



17. Apply the urethane tape.

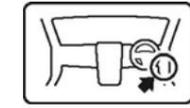

Urethane Tape


Divide into two equal parts

Vehicle 4-pole coupler

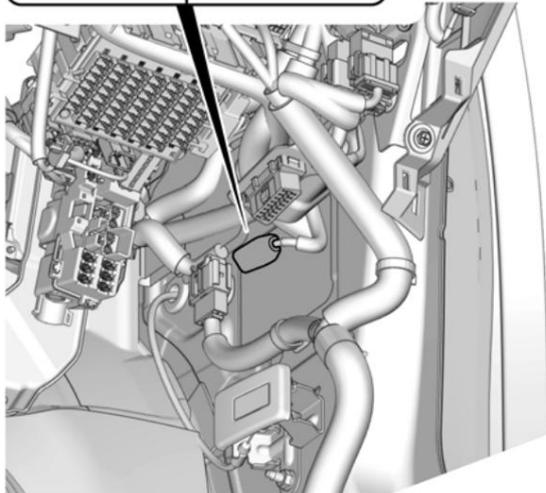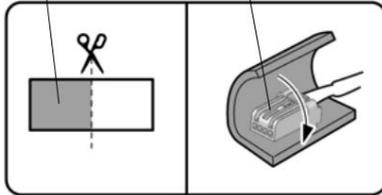

QKN1108AH



18. Apply the urethane tape.

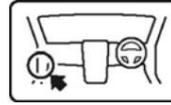

Urethane Tape

Use the two pieces cut in step 17

Vehicle 4-pole coupler

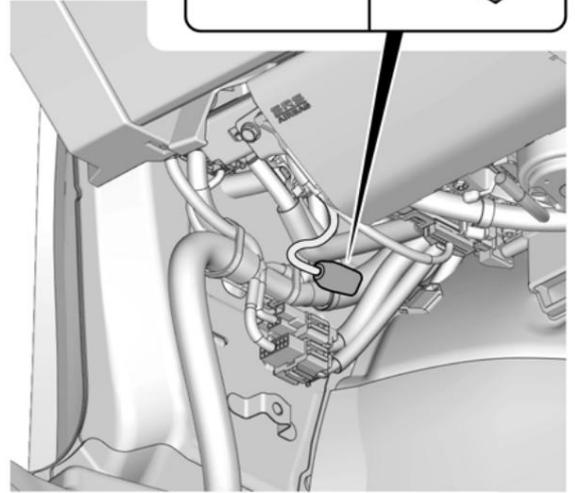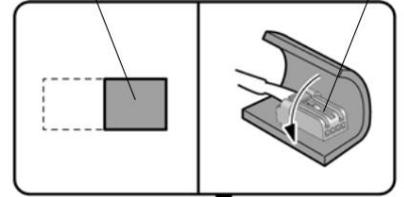

QKN1109AH

19. Attach the fuse labels.


Fuse Case




Peach and young leaves code

Fuse Label (2A Foot Light ÿ+Bÿÿ)

Blue and Gray Code

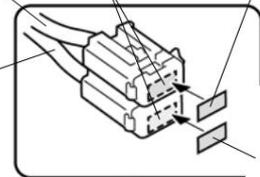


Fuse Label (2A Foot Light (INSIDE+))

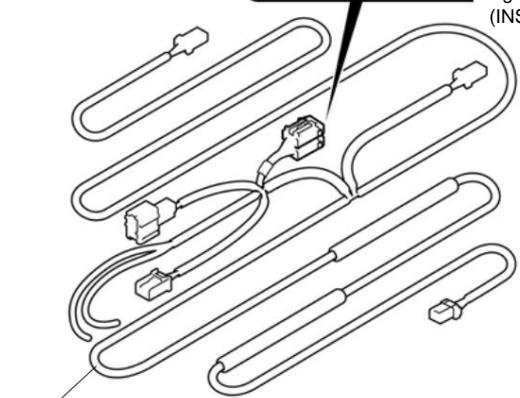


Harness A

QKN1110AH

20. Run harness A through.

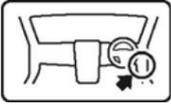

Fuse Case

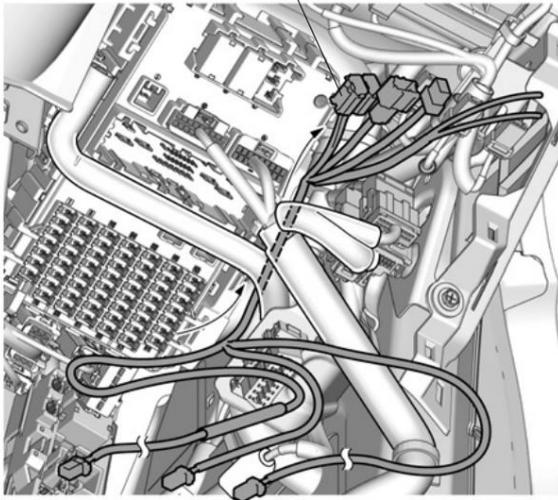


QKN1111AH

21. Cut off the tube.

アドバイス

- Be careful not to damage the vehicle harness.

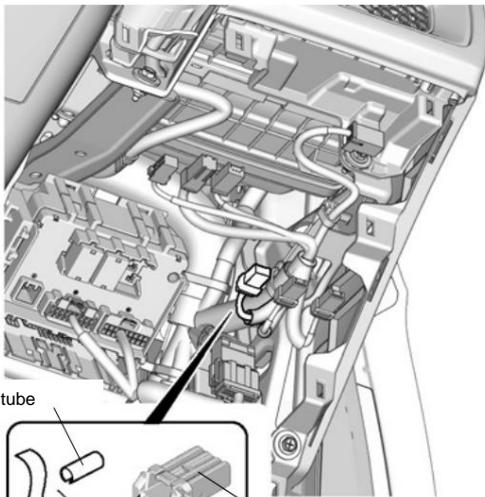

tube

Vehicle 4-pole coupler (dark gray)

50 mm


tape

QKN1112BH


22. Connect the harness A cord.

アドバイス

- Be careful not to connect the cord to the wrong position.
and.

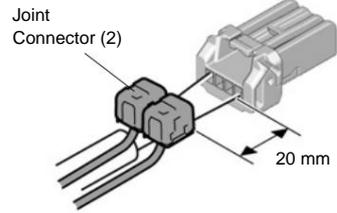

<View from the harness side>

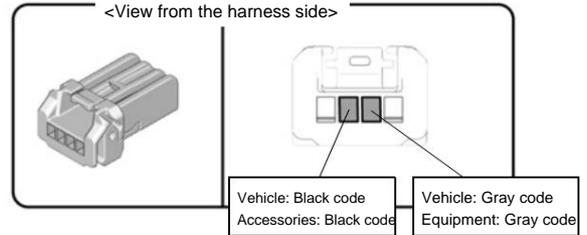

How to install the joint connector

- 1 Product Code case
- 2
- 3 Vehicle Code
- 4 cover Lock (1st row)
- 5 Lock (2nd row)

How to handle incorrect connections

Do not remove the joint connector once it has been installed.


- 1 The second level is locked. Product Code. Approx. 40 mm.
- 2 Insulating tape. Insulation.
- 3 Use a new joint connector to connect the supply cord to the appropriate cord.

QKN1113AH

23. Secure the harness A cord.


アドバイス

- Do not wrap the vehicle harness tube or tape around the and.

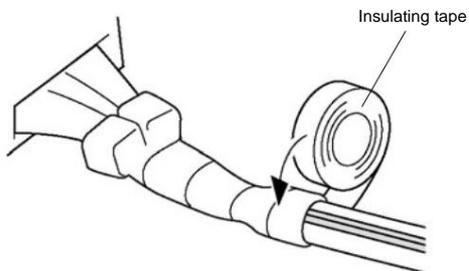



QG50113BT

24. Apply the urethane tape.

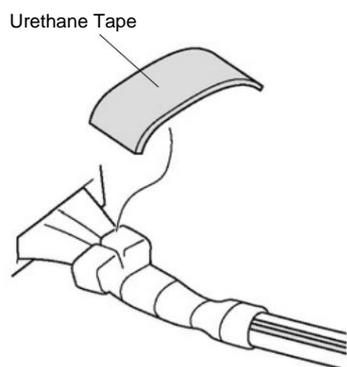


QG50112CT

25. Connect the coupler of harness A.

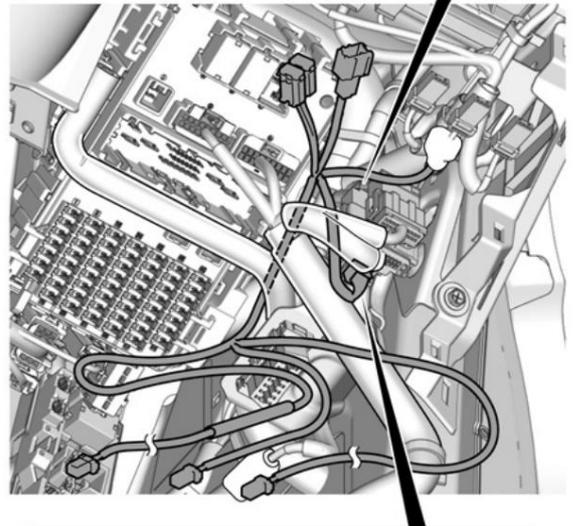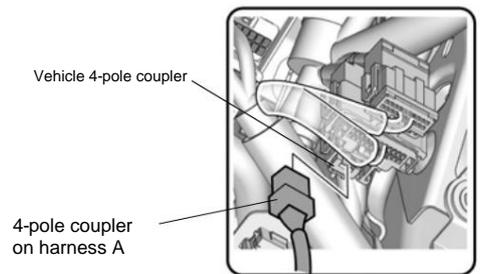


<If multiple other items are present> If there is a dummy coupler before connecting, remove the dummy coupler before connecting.

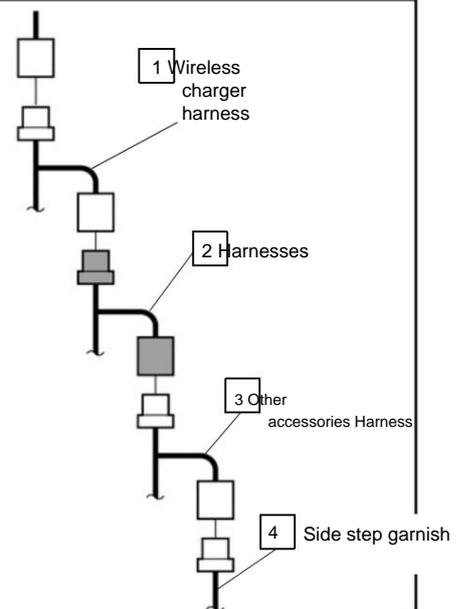


QKN1114BH


26. Secure the coupler of harness A.

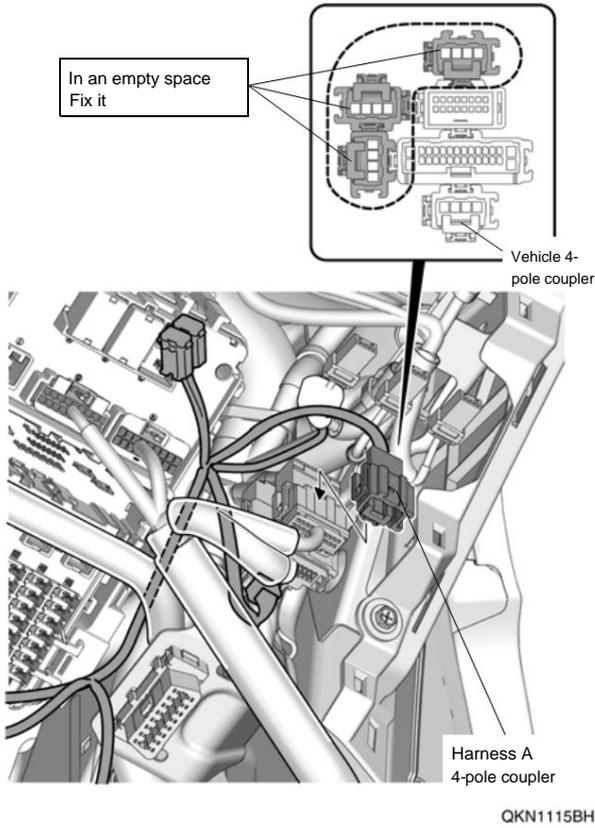



27. Secure harness A.

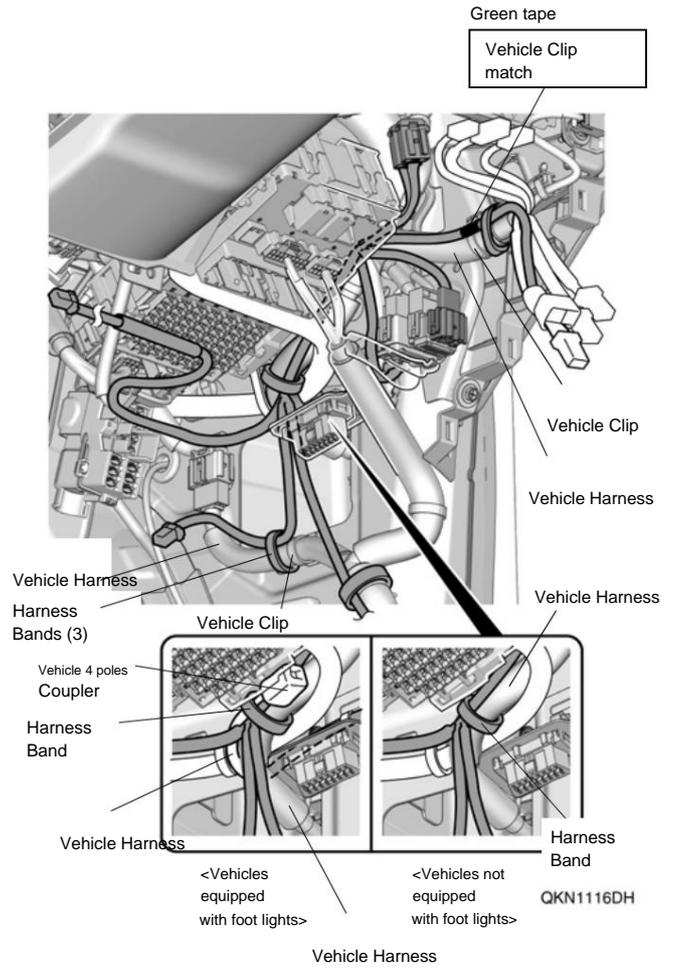

28. Secure the fuse case.

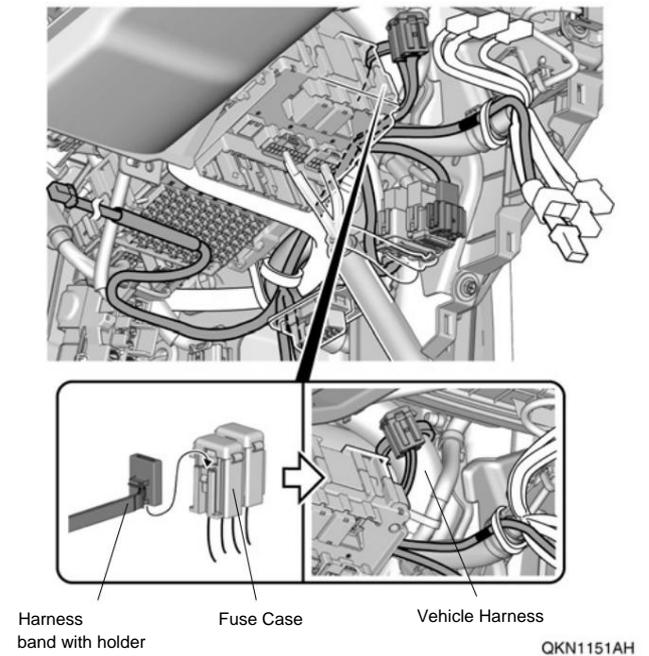

29. Fold down the right front seat.

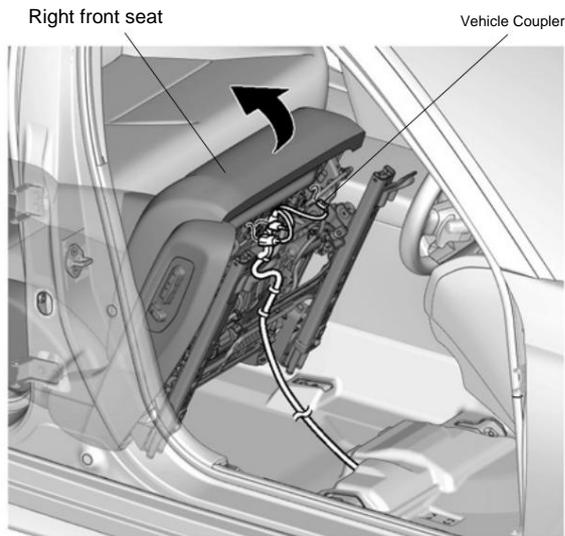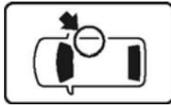



QKN1106CH

30. Lift the right seat cushion.

アドバイス

- Remove in the order shown in the illustration.

31. Remove the vehicle clip.

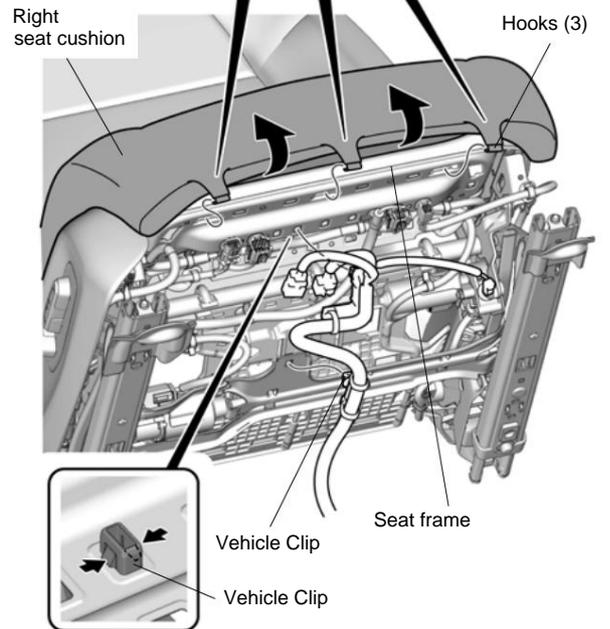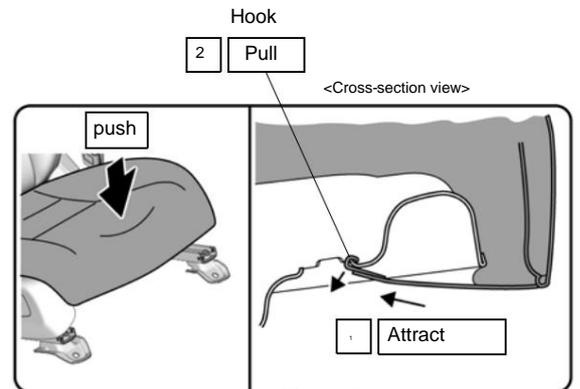



<Vehicles equipped with power seats>

QKN1146AH



32. Follow the instructions below.

•Power seats	
Equipped vehicles	Go to step 33
Unequipped vehicles	Go to step 36



33. Run harness A through.

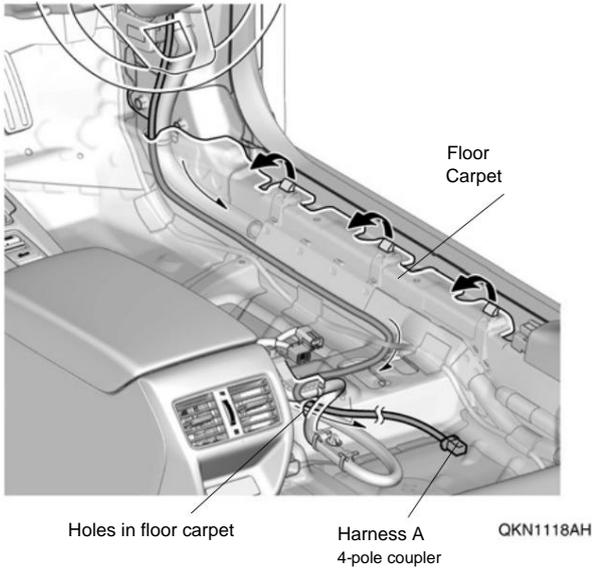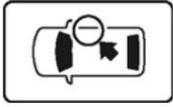

34. Secure harness A.

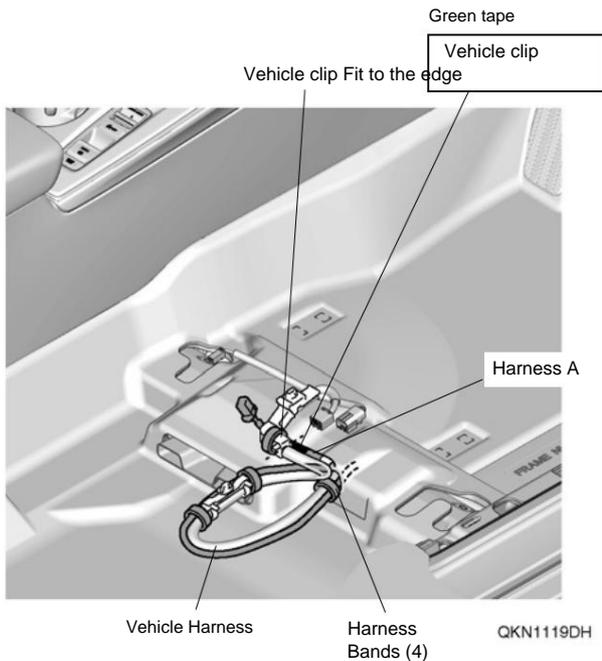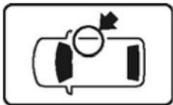


35. Secure harness A.

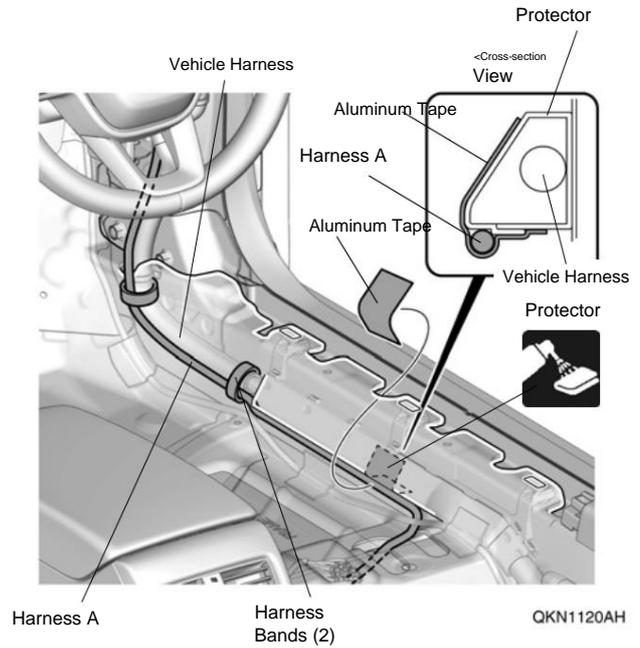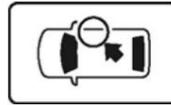


Go to step 39


36. Run harness A through.

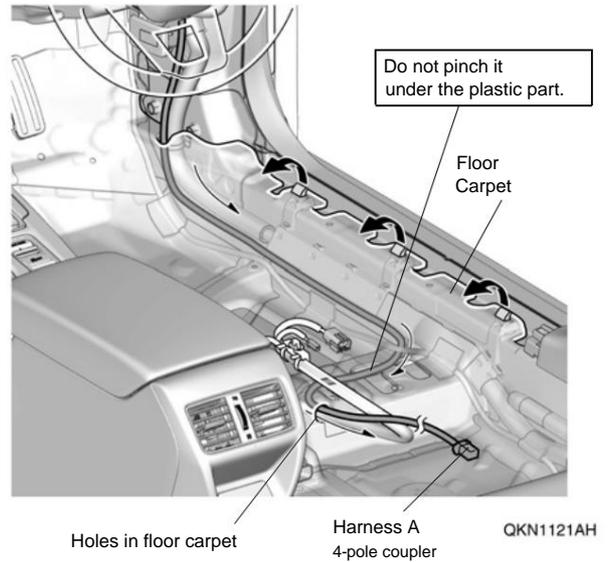


37. Secure harness A.

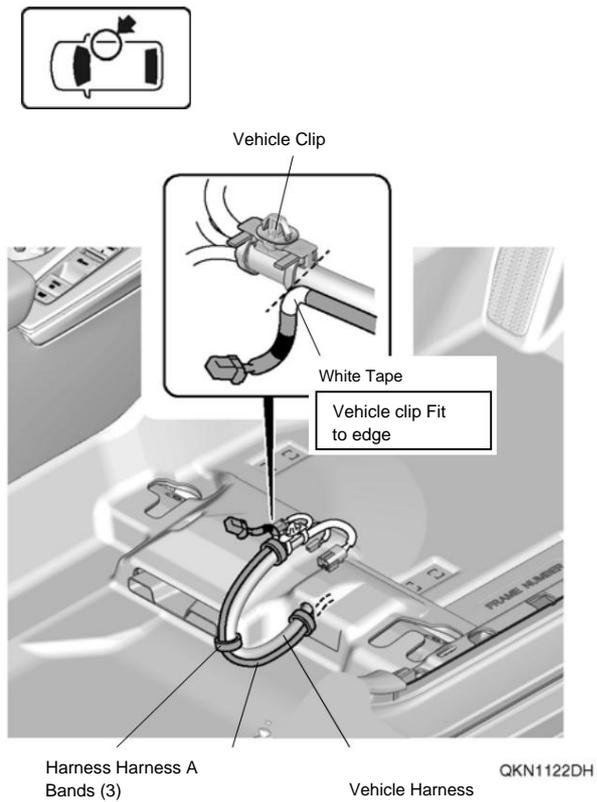



38. Secure harness A.

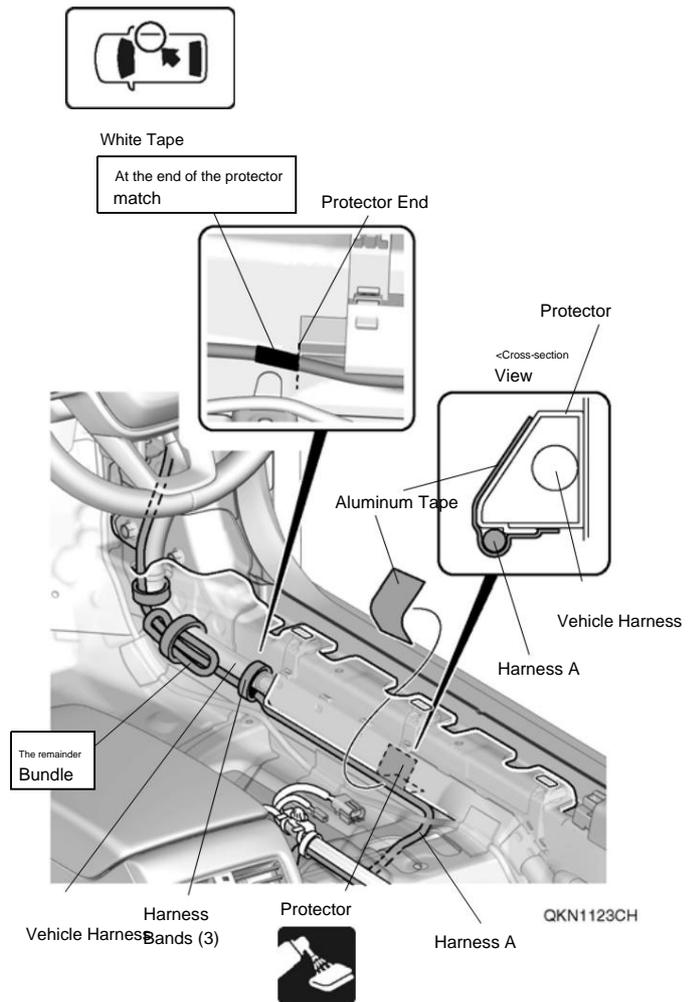

39. Run harness A through.

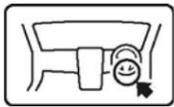


Harness A

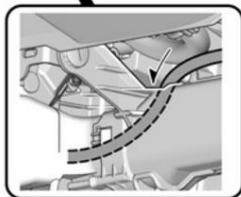
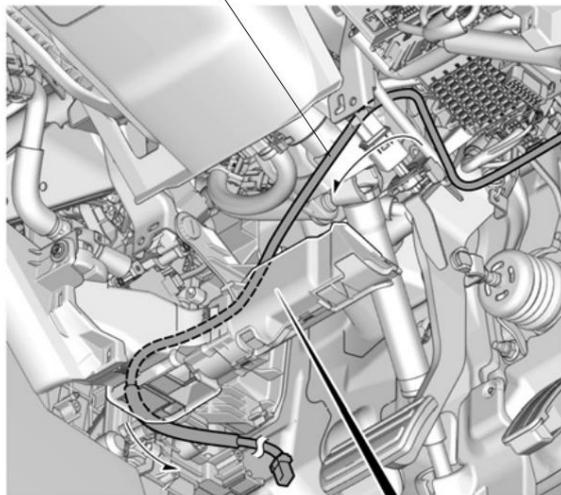


QKN1124AH


40. Thread the wire through.

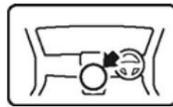

<View from the opposite side>

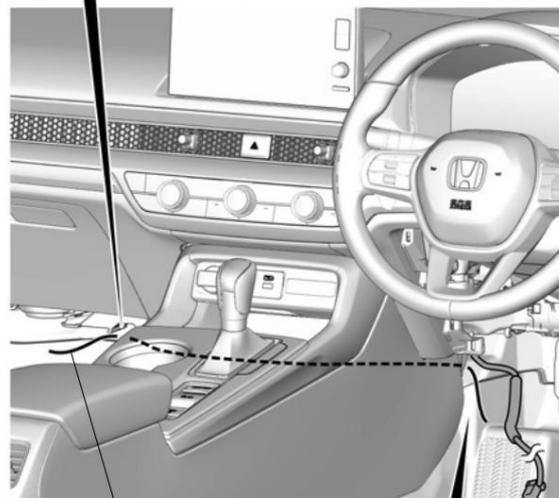
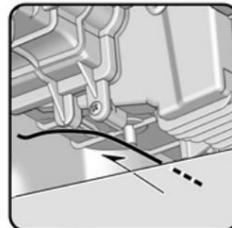


wire

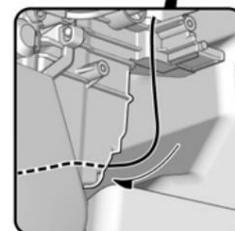


QKN1125AH

41. Attach the wire.

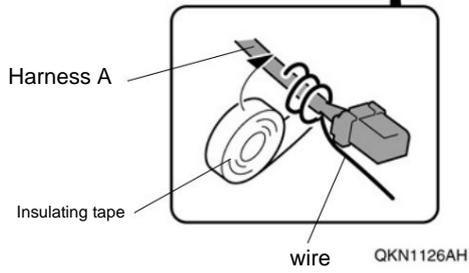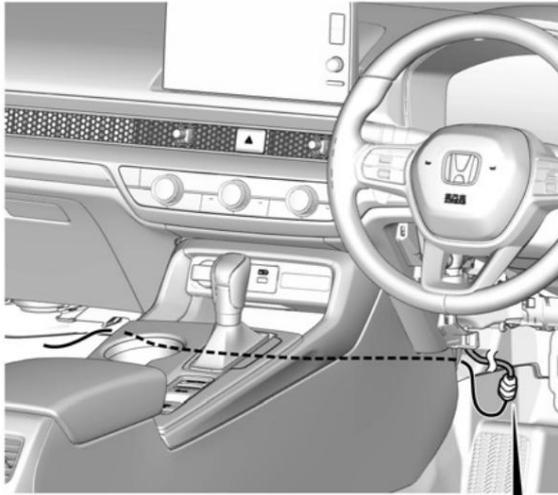





42. Run harness A through.

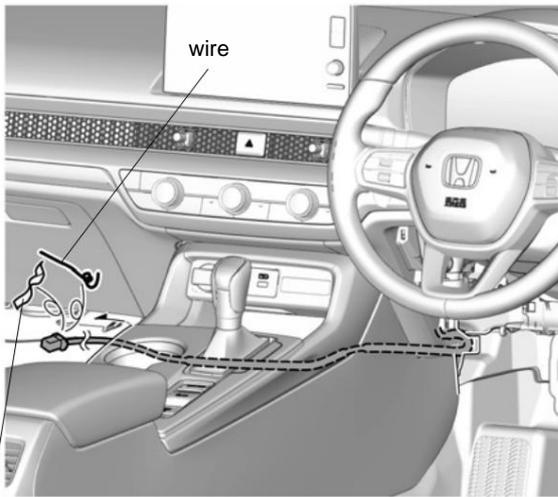

Insulating tape QKN1127AH

43. Remove the wire.

44. Secure harness A.

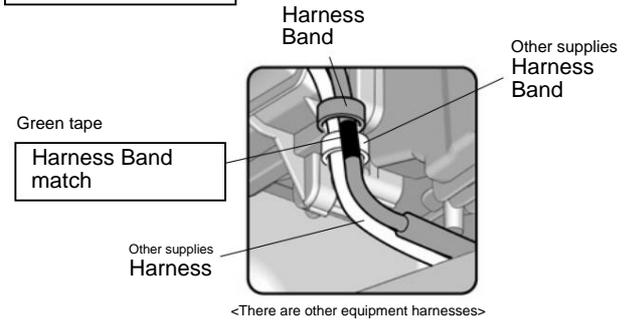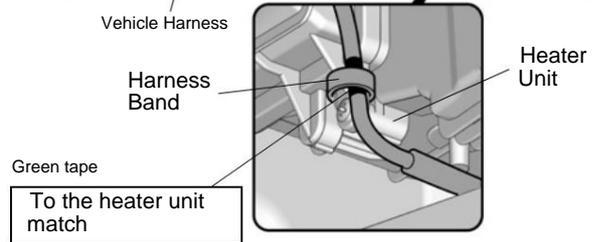
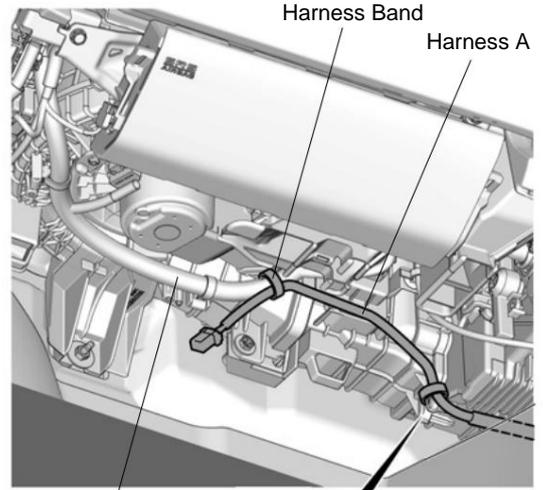
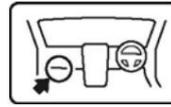


QKN1128AH

45. Secure harness A.

アドバイス




- Note the orientation of the harness straps with clips. To intend.
- Be careful not to damage the harness.

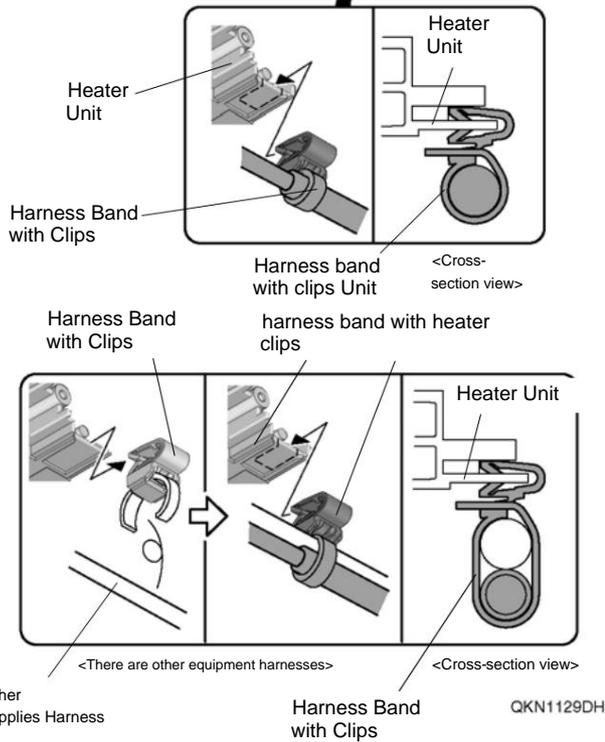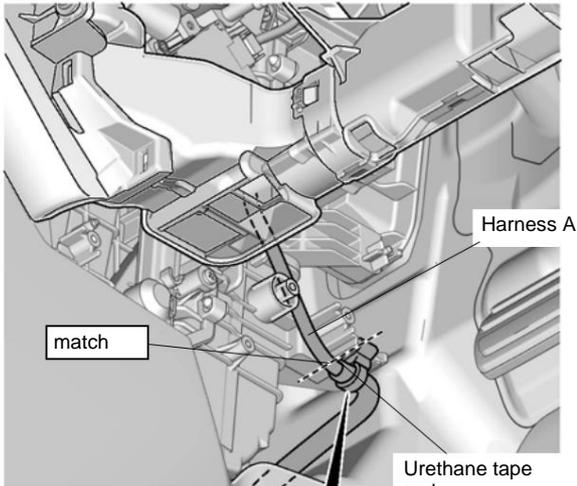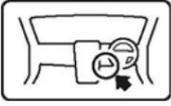

46. Secure harness A.

アドバイス






- Be careful not to damage the harness.

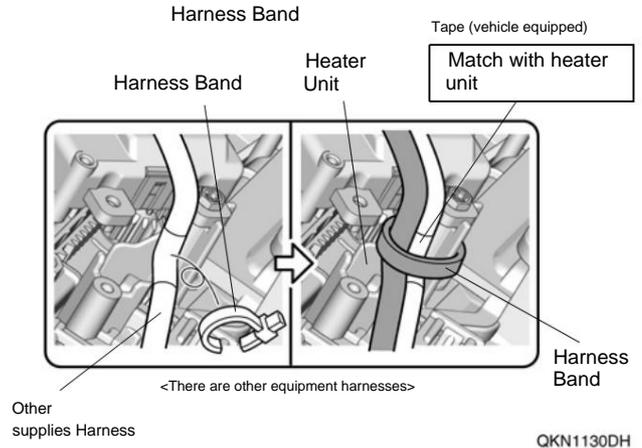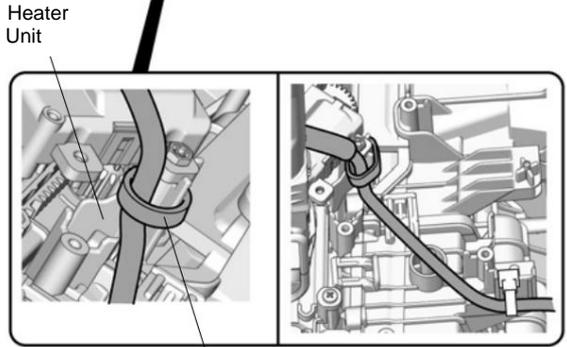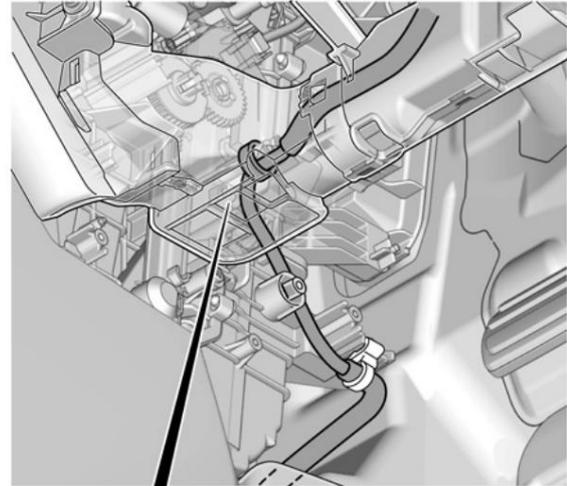

47. Secure harness A.

アドバイス

- Be careful not to damage the harness.

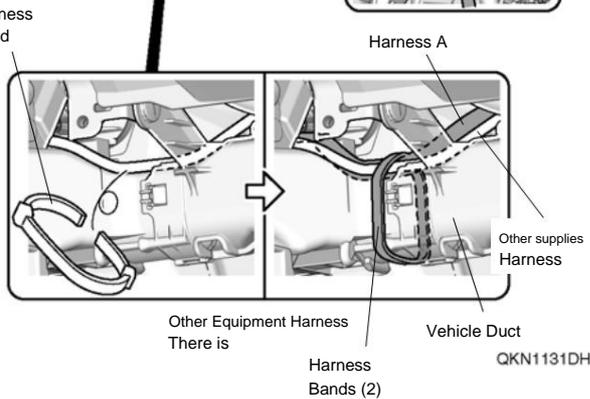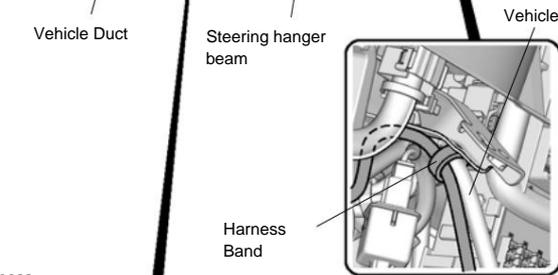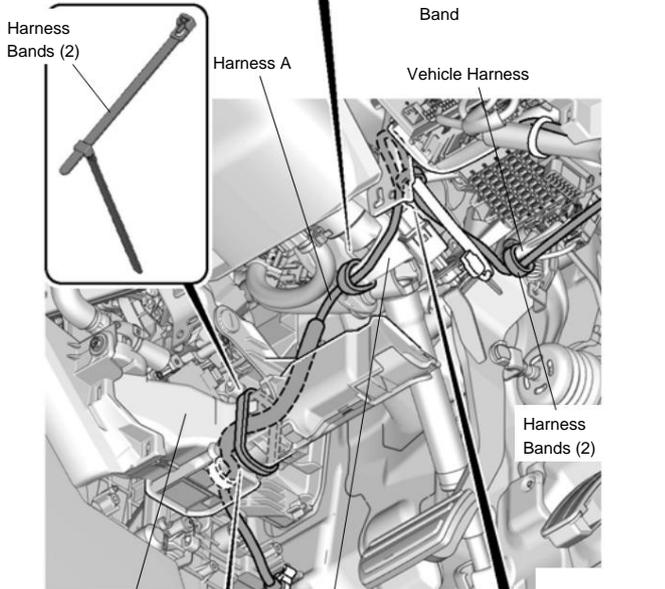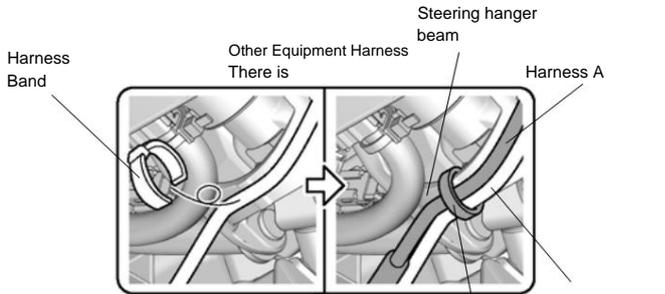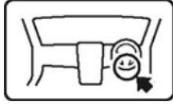






QKN1131DH

48. Connect the coupler of harness A.

49. Secure the coupler connection.

アドバイス

- Be careful not to damage the harness.

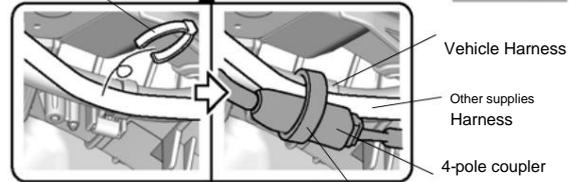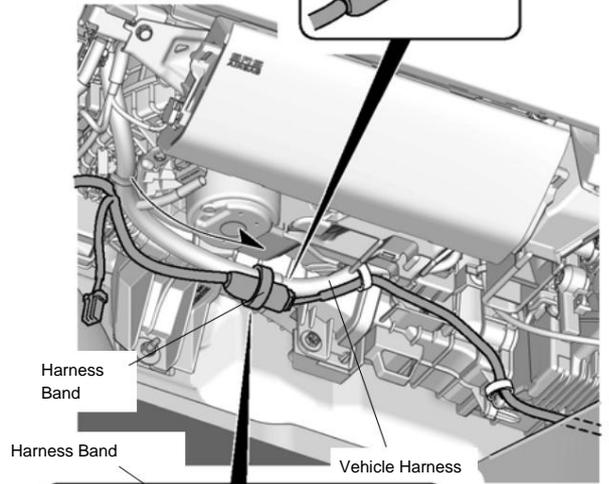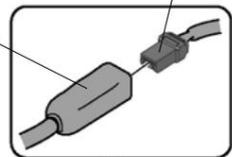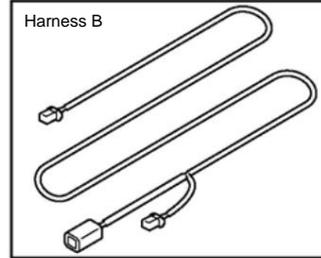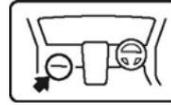


<Other equipment harnesses be>


Harness Band

QKN1132CH

50. Secure harness B.

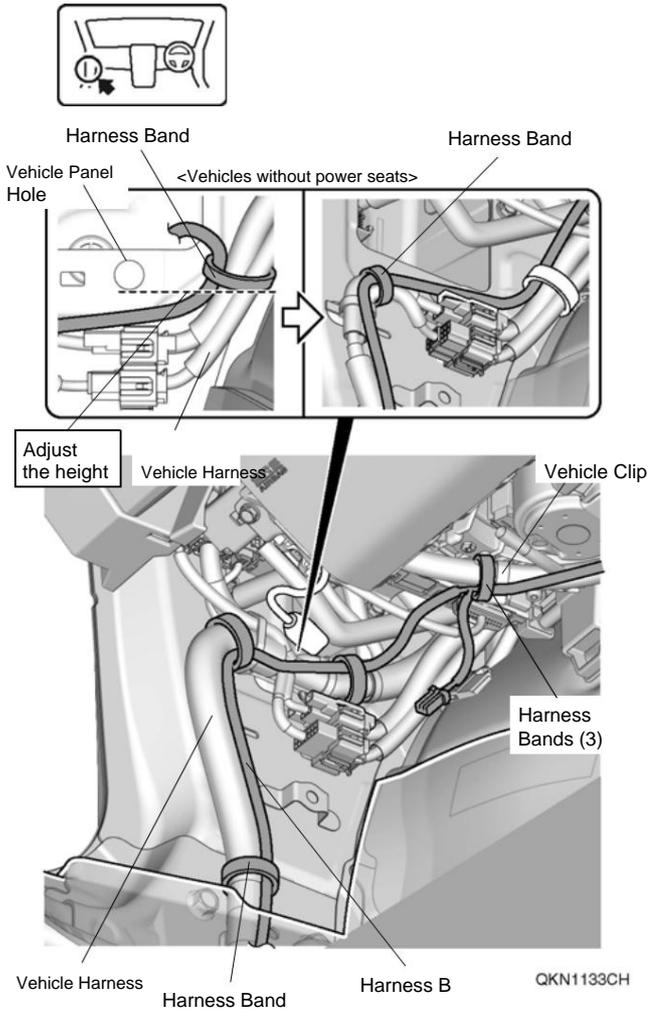


51. Fold down the left front seat.

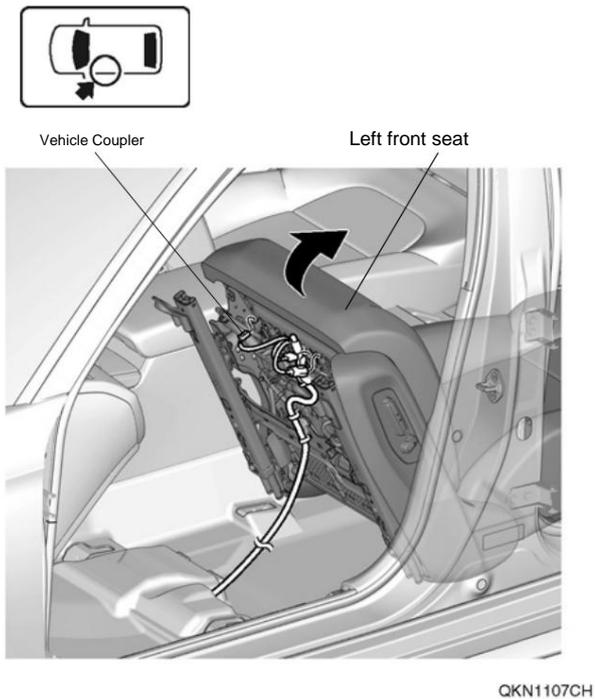

52. Lift the left seat cushion.

アドバイス
• Remove in the order shown in the illustration.


53. Remove the vehicle clip.

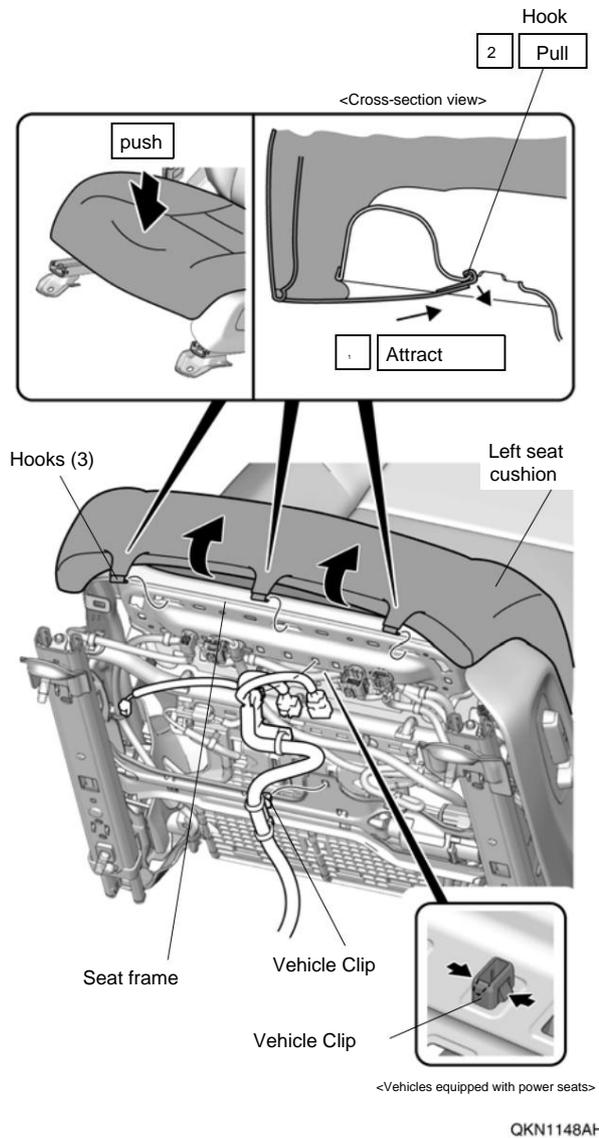

54. Follow the instructions below.

•Power seats		
	Equipped vehicles	Go to step 55
	Unequipped vehicles	Go to step 58

55. Run harness B through.

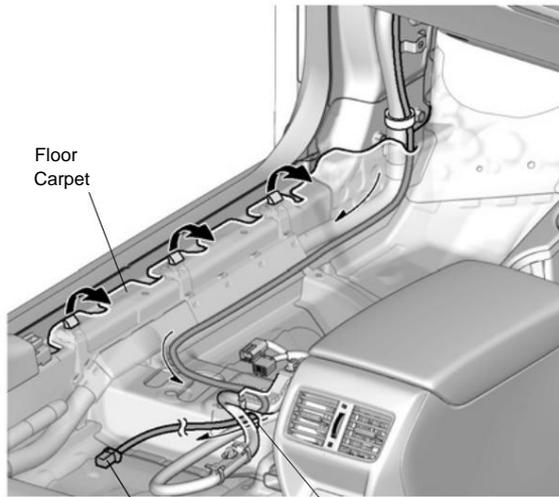



Floor Carpet

Harness B 4-pole coupler

Holes in floor carpet

QKN1135BH

56. Secure harness B.

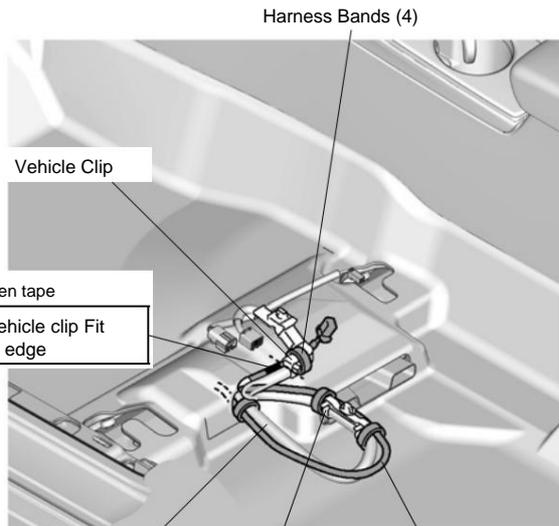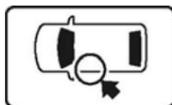

Harness Bands (4)

Vehicle Clip

Green tape



Vehicle clip Fit to edge

Vehicle Harness Vehicle Clip

Harness B

QKN1136CH

57. Secure harness B.

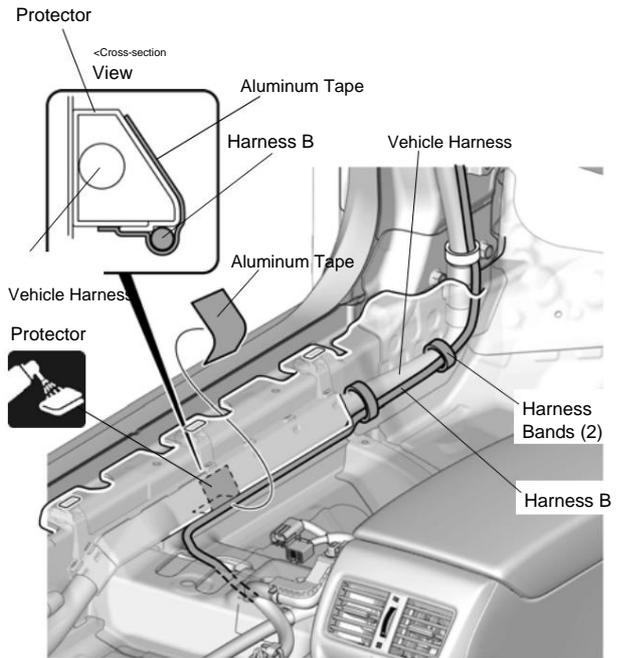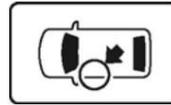

Protector

<Cross-section View

Aluminum Tape

Harness B

Vehicle Harness

Aluminum Tape

Vehicle Harness



Protector



Harness Bands (2)

Harness B

QKN1137AH

Go to step 61

58. Run harness B through.

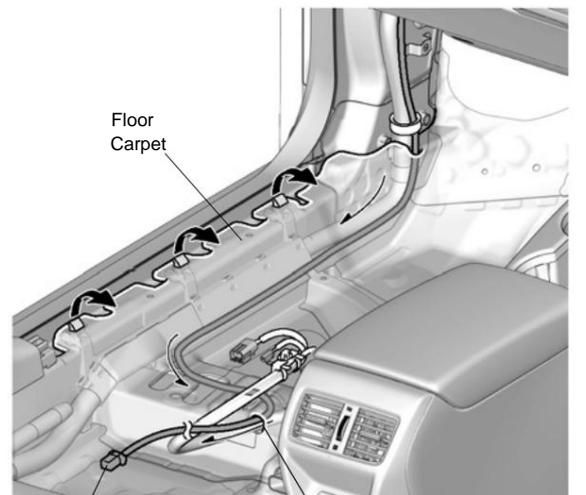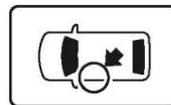


Floor Carpet

Harness B 4-pole coupler


Holes in floor carpet

QKN1138BH

59. Secure harness B.

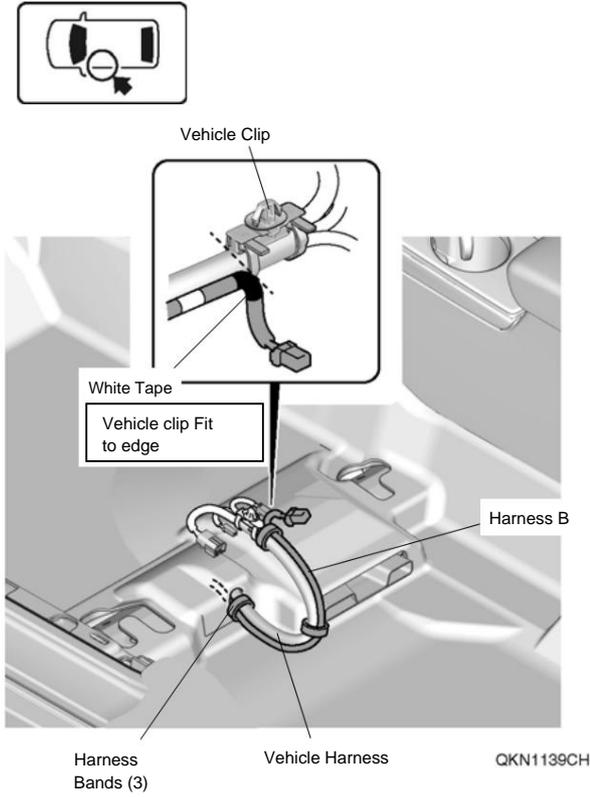

60. Secure harness B.

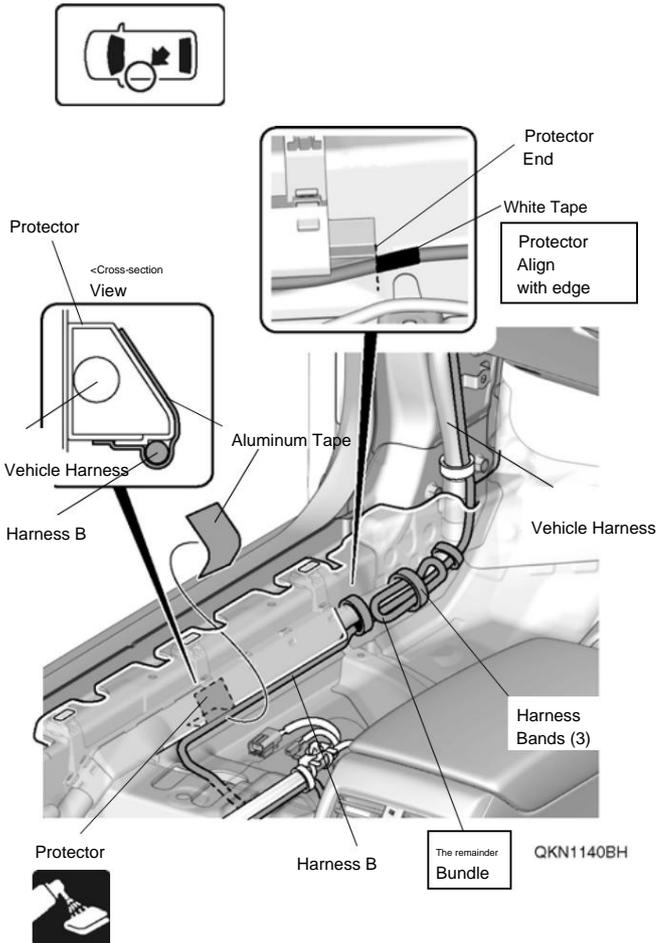


Installing the lights


61. Follow the instructions below.

•Vehicle foot lights	Equipped vehicles	Go to step 62
	Unequipped vehicles	Go to step 64


62. Fix the vehicle coupler.

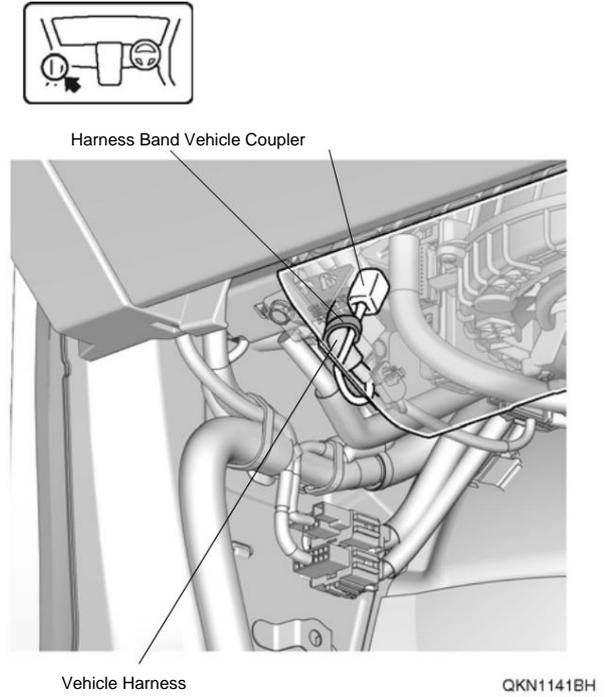


63. Remove the vehicle foot lights.

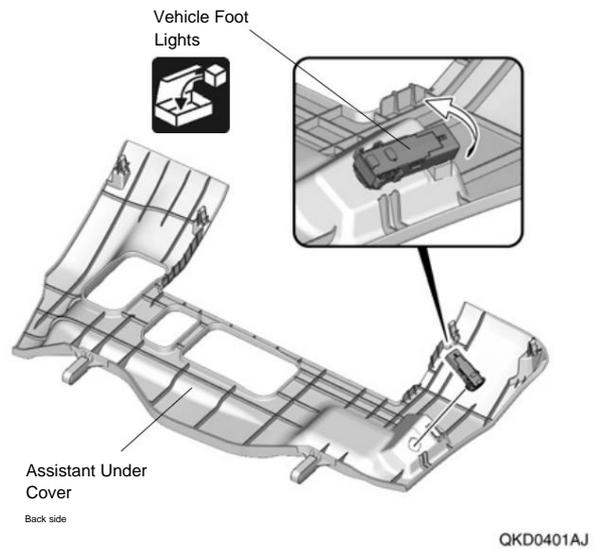


64. Mark the assistant under cover.

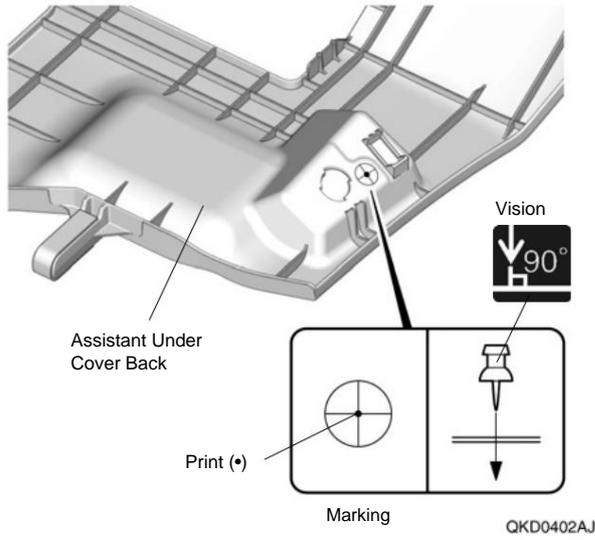

65. Drill holes in the assistant under cover.

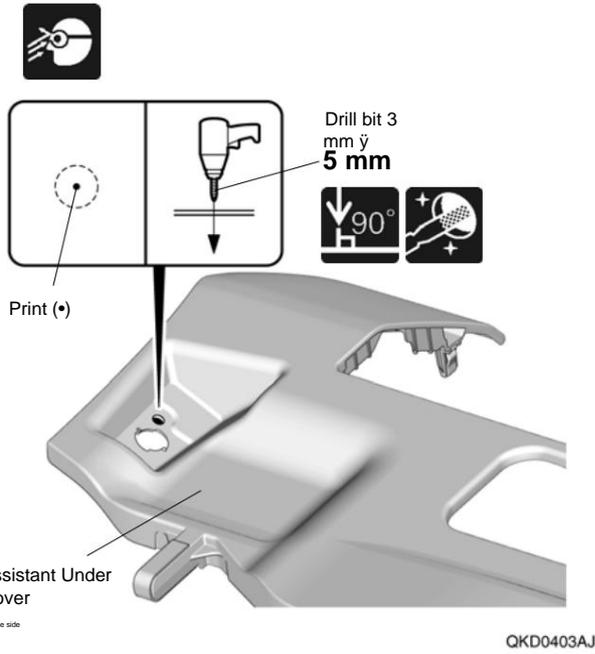


66. Install the lights.

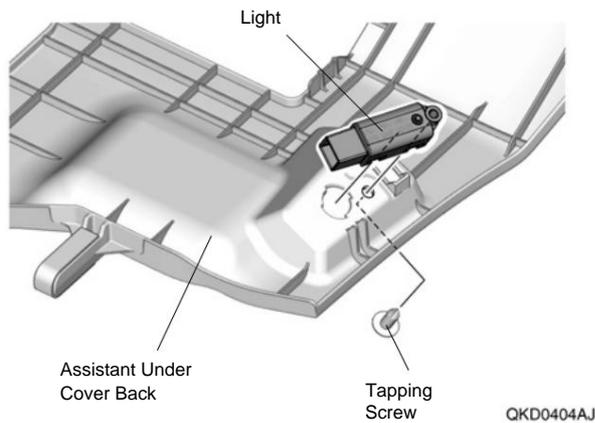


67. Connect the coupler of harness B.

68. Reinstall the assistant under cover.

do.

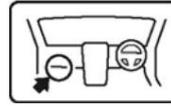


Harness B
4-pole coupler

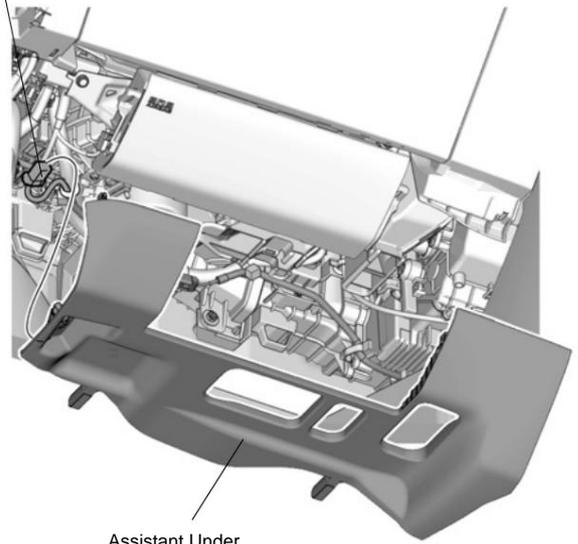


69. Follow the instructions below.

•Vehicle foot lights	
Equipped	Go to step 70
vehicle Unequipped vehicle	Go to step 71



70. Remove the vehicle foot lights.

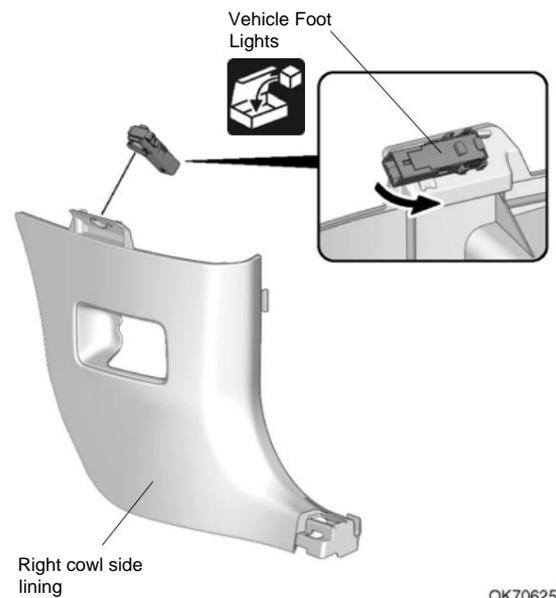

71. Install the lights.

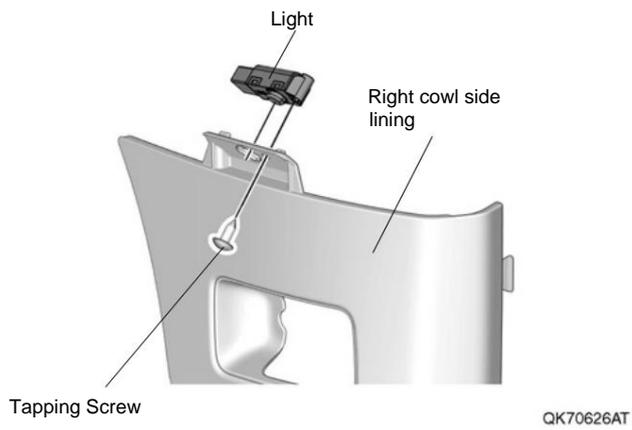


72. Connect the coupler of harness A.

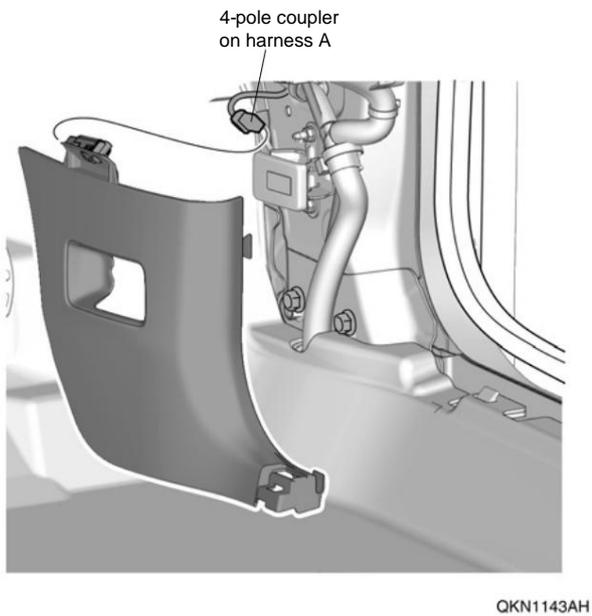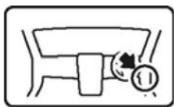





73. Install the lights.

アドバイス

- Be careful about how you install the light.

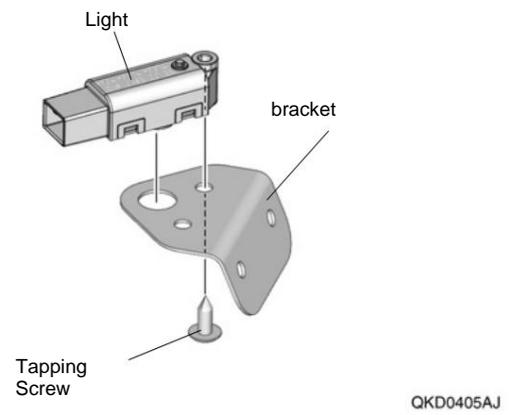

74. Fix the bracket.

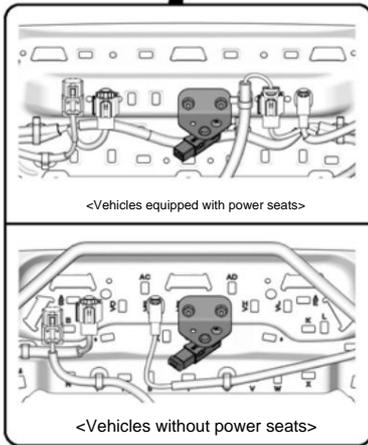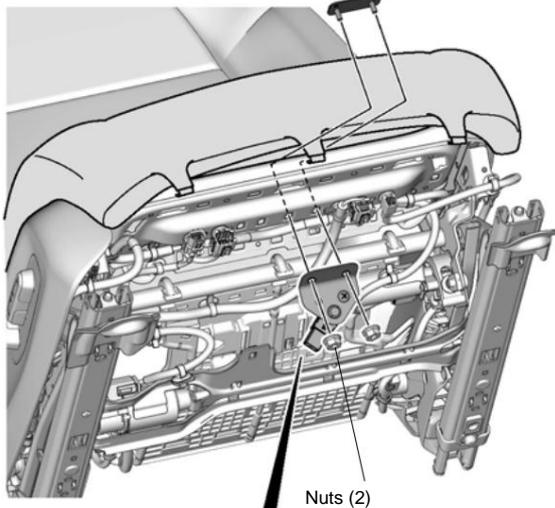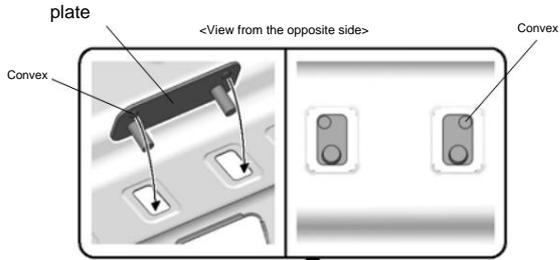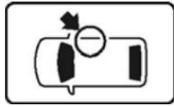

QKN1144DH

75. Reinstall the vehicle clip, right seat cushion, and vehicle coupler that were removed in steps 29 to 31.


76. Connect the coupler of harness A.

77. Secure the right front seat.

Bolts (2)



31.4 ÷ 55.0 N ÷ m
 ÷ 3.2 ÷ 5.6 kgf ÷ mÿ

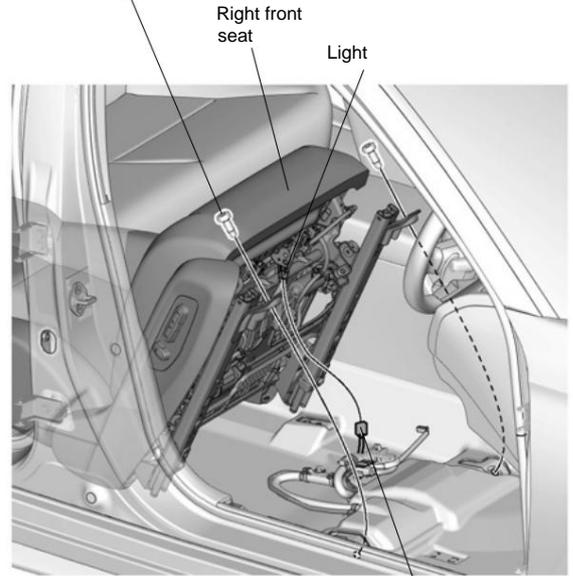


Harness A
 4-pole coupler

QKN1145BH

78 Install the lights.



アドバイス

- Be careful about how you install the light.

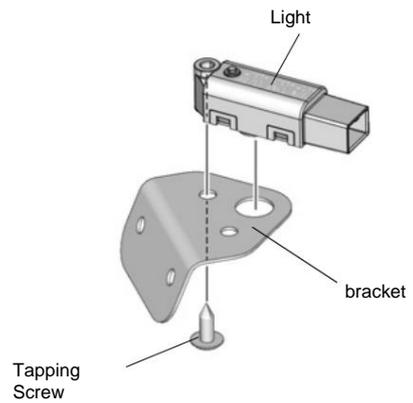


QKN1147AH

79. Fix the bracket.

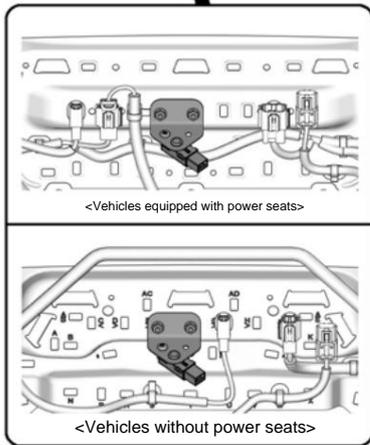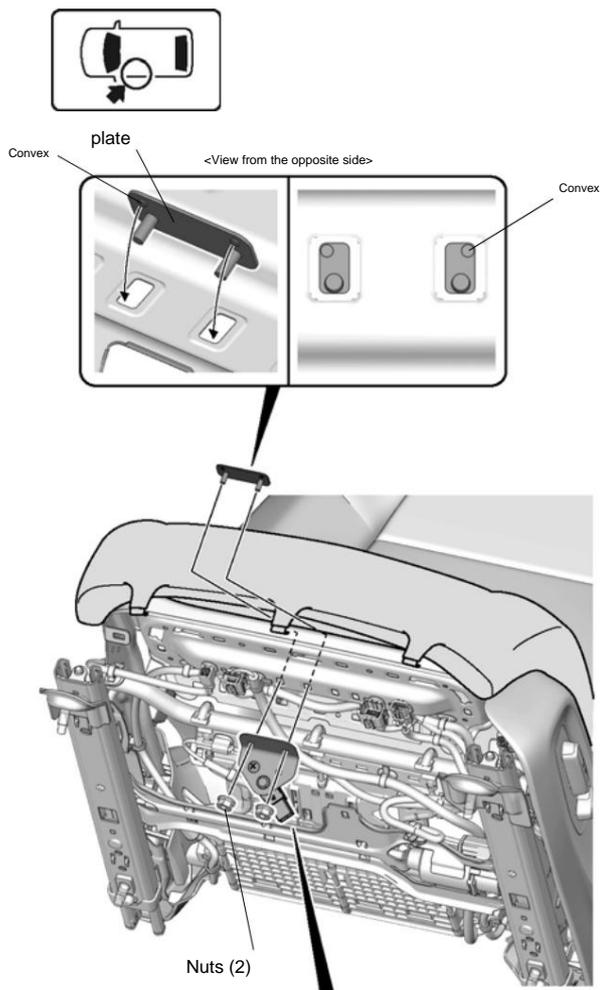

QKN1149CH

80. Reinstall the vehicle clip, left seat cushion, and vehicle coupler removed in steps 51 to 53. 81. Connect the coupler of harness B. 82. Secure the left front seat.

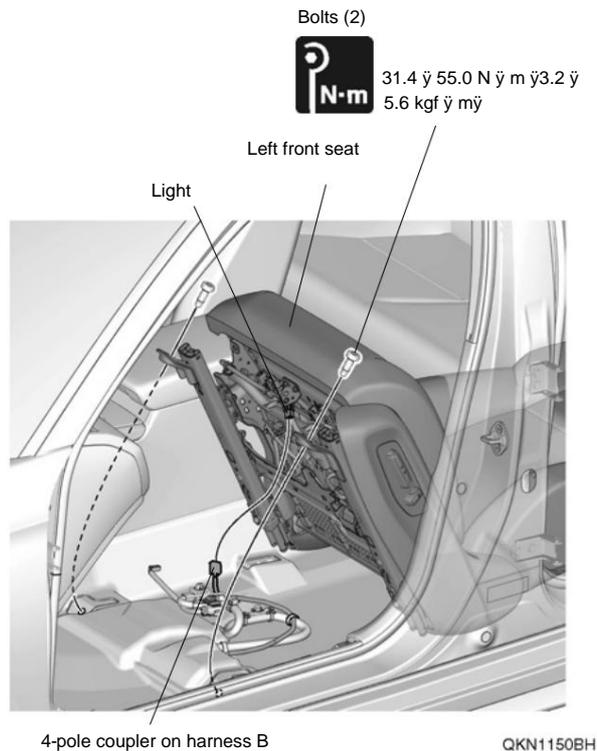


QKN1150BH

Installation check

83. Check that there are no abnormalities in the wiring or installation.

アドバイス

- Forcibly pushing, pulling, pinching, etc. into the harness
Make sure there are no.
- Check that clamps, bands, etc. have not come loose or been forgotten to be tightened.

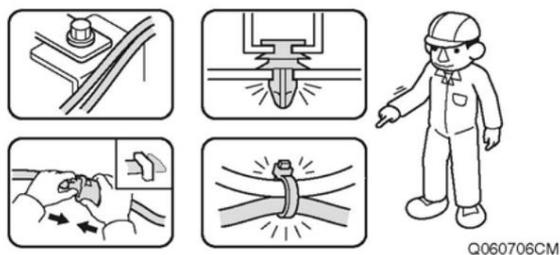


Q060706CM

Restoration work

84. Reinstall all vehicle parts except for the bolt removed in step 1 (repeat on opposite side).

アドバイス

- Be careful not to damage vehicle parts or pinch harnesses. Be very careful.
- Be sure to attach clips, tabs, etc. securely so that they do not float. To attach.

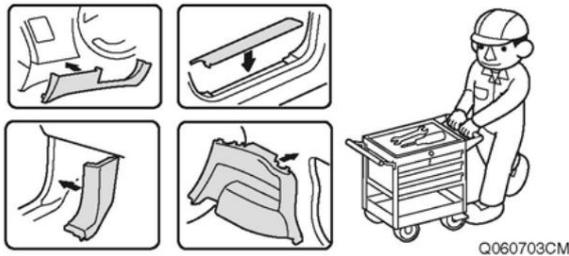


Q060703CM

<Installing the driver's knee cover> 85.

Reinstall the driver's knee cover.

アドバイス

- Bolts cannot be reused and must be replaced.

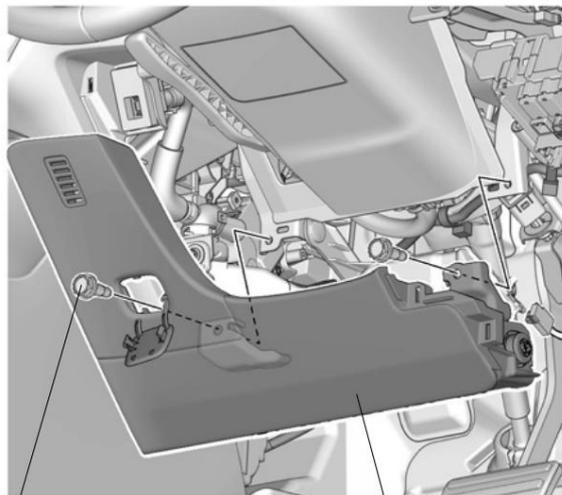

Bolts (2)
(included in kit)


Driver
Knee Cover

QKN1214AH

N·m 6.9 ÷ 14.4 N ÷ m ÷ 0.7
÷ 1.5 kgf ÷ m ÷ y

Operation check

86. Connect the negative (-) battery terminal.


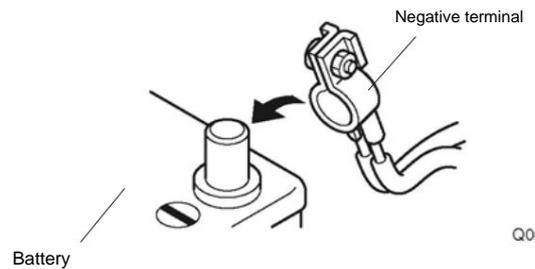


Q060702BM

87. After turning the engine switch (POWER switch) to ON, verify that the SRS warning light stays on for 6 seconds and then goes out.

88. Reinstall the bolts removed in step 1.

do.

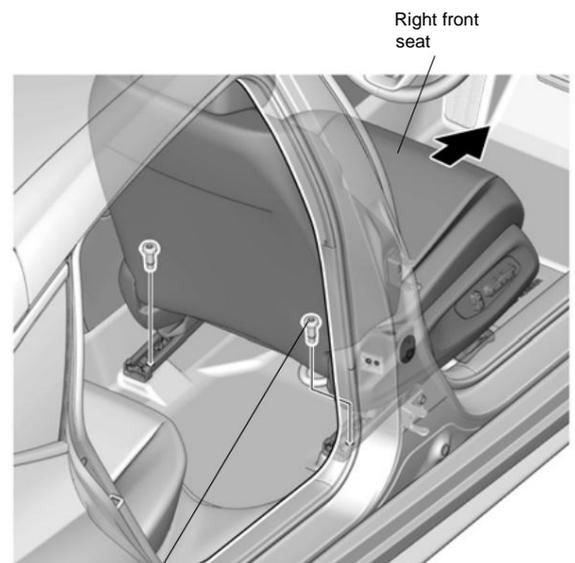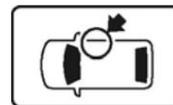

Right front
seat

Bolts (2)

QKN1102AH

N·m 31.4 ÷ 55.0 N ÷ m ÷ 3.2 ÷
5.6 kgf ÷ m ÷ y

89. Repeat step 88 on the other side. 90. If necessary, enter the security code for your navigation system. 91.

Check the operation by referring to the instruction manual.


Vehicle Check

92. Electrical accessories and electrical systems are functioning properly

Make sure you do so.

93. Check the memory and knob positions of each device before installation.

Return to normal state.

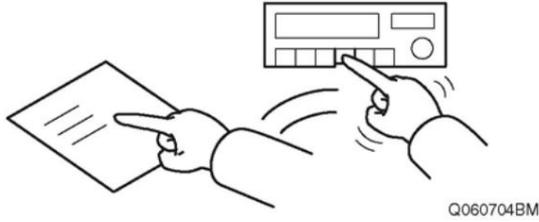

<Inspection / Various Registrations and Learning> 94.

Carry out learning work involving disconnecting the battery.

アドバイス

- Refer to the service manual to perform any work.

Please provide the following to the customer:

- operating instructions